

INTELLIGENT MESSEN!
MEASURE WITH INTELLIGENCE!

ecom[®]

English



OPERATION MANUAL

ecom[®] CL2

Version
ecom-CL2

Status January 2023

Index

Important Hints	4
1. Instrument Design.....	6
2. Switch on Instrument	8
3. Input or select a data record	9
4. Combustion Measurement	10
4.1 Prepare Combustion Measurement	10
4.2. Gas Analysis.....	10
4.3. Draft Measurement.....	12
4.4. Soot...Oil trace	13
4.5. Record and print measurement result	13
4.6. After Measurement	14
5. Mean value (option)	15
6. Measurement Routines (Option)	16
6.1. Atmospheric Boilers.....	16
6.2. Fan burners	20
6.2.1. Gas fan burners.....	20
6.2.2. Oil fan burner.....	23
6.3. Diagnosis gas	25
7. Adjustments	27
8. Control	30
9. Data processing (Option).....	31
9.1. Communication.....	31
9.2. Data processing with App.....	32
10. Maintenance Tips	33
11. Technical Data	35
12. FAQ.....	36

Congratulations!

With your purchase you have decided on a high-quality product of ecom GmbH.

Get to know the product before you start using it while reading carefully the following instructions of use and the safety indications. Use the product only as described and only for the given areas of application in order to ascertain its longevity.

Important Hints



The ecom-CL2 meets the requirements of the DIN EN 50379 Part 3 (Part 2 as option).



The ecom-CL2 may not be used for continuous emission control!



Following minimum times must be kept to get correct measurement results:

- 1 Minute for fresh air calibration
- 2 Minutes to get stable measurement results



Following substances affect the function of the instrument:


- solvent containing gases as in:
 - cleaning agents
 - fat remove agents
 - wax polish
 - adhesives
- Formaldehyde



Settings on fireplaces should just be made by professionals who are experienced with the function and adjustments of fireplaces!



1. Charge the accumulator regularly (Charge not used instrument min. once a month)!
2. Never store the instrument with unloaded battery!

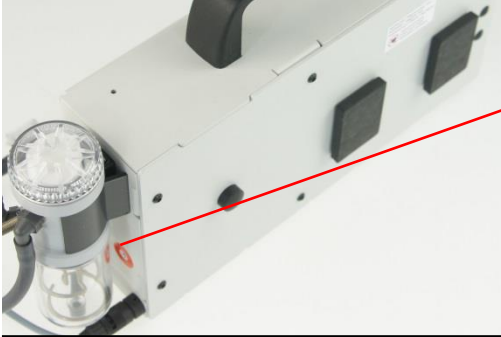



Fresh air opening



**Do not lock fresh air opening
for fresh air pump!**

1. Instrument Design

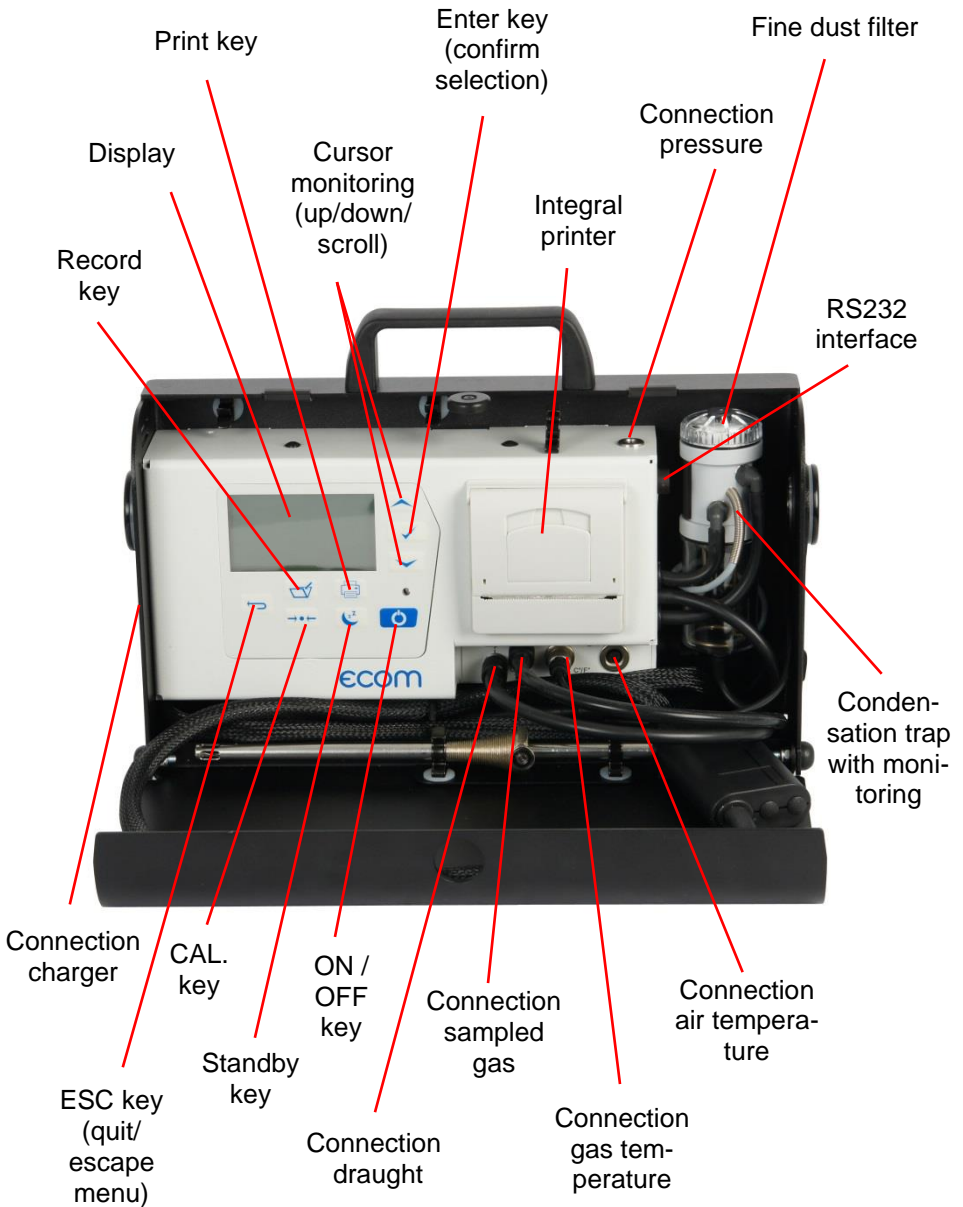

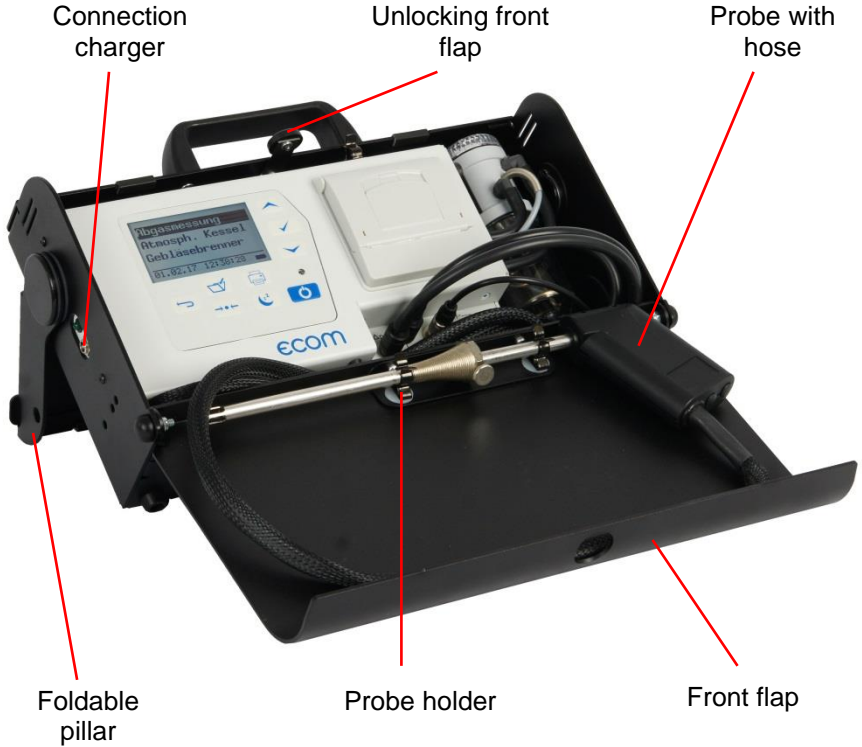

2. Switch on Instrument

After switch on the instrument (press <I/O>) the main menu appears on the display. There will be displayed sub-menus with following functions (not visible sub-menus could be displayed by scrolling with arrow keys):

Comb.measure.
Mean value
Atmosph. boiler
Burn. w. blower
Diagnosis gas
Pressure tests
Data processing
Adjustment
Control

Comb. measure.	: operate combustion measurement
(Mean value	: operate mean value measurement)*
(Atmospheric boiler	: operate routine for atmospheric boilers)*
(Fan burner	: operate routine for fan burners)*
(Diagnostic gas	: operate routine for gas fireplaces)*
(Pressure tests	: pressure tests according to TRGI)*
Data processing	: assign measurements / Data transfer
Adjustments	: change adjustments of instrument
Control	: check status of instrument (* = Option)

To perform measurements, select with the cursor keys the sub-menu **"Gas analysis"** and confirm with <Enter>. The instrument starts then a 1- minute calibration phase and the fuel types selection list is displayed. The following fuel types acc. to 1st BImSchV are available:

- Fuel oil (B)
- Natural gas (B)
- City gas (B)
- Coke oven gas (B)
- Liquid gas (B)


Type of fuel
Fuel oil (B)
CO2max : 15.4
A1-fact. : 0.50
Select with

Use the cursor keys to select the desired fuel type and confirm with <Enter>. The instrument will then enquire if you wish to use the data bank. If you want to assign the sampled data to a specific plant, so choose „**YES**“ with the cursor keys and confirm with <Enter>. („**NO**“ = measurement will be performed without assignment).

Data processing
NO
Are you sure?
Continue with

3. Input or select a data record

The ecom-CL2 has 300 storage locations. In order to call up a data record with data already stored in the instrument or to create a new file, choose a data record with the Cursor keys and confirm with **<Enter>**

Memory number 0
Data record is empty !
Confirm with 

If you are choosing an empty data record, a designation (max. 16 indications) can be assigned. Proceed as follows:

- choose a keyboard with the **<CAL.>** key (5 keyboards are available)
- select a character with the keys **<record>** (left), **<Print>** (right) and the Cursor keys **<up/down>** (selected character is black deposits)
- take over the character with **<Enter>**
- repeat procedure, until desired designation is complete
- if you want to correct a character, proceed as follows:
 - interrupt the selection with **<Standby>**
 - select the character with the keys **<record>** (left), **<Print>** (right) and the Cursor keys **<up/down>**
 - activate the selection with **<Standby>** and select the correct character
- turn to Combustion measurement with 2 x **<ESC>** , „**Comb. measurement.**“ and **<Enter>**.

If you are choosing a data record with data, you can call up the data with **<Enter>** / **<record>** / **<Enter>**. Now you can view the data with the Cursor keys **<up/down>**.

4. Combustion Measurement

4.1 Prepare Combustion Measurement

Prepare instrument for measurement operation by making all connections (T-Room sensor and T-Gas, GAS and DRAUGHT of the 3-chamber hose). Make sure that:

- the water trap contains no humidity
- the fine dust filter and the safety filter are not soiled darker than no. 3 on the soot scale

4.2. Gas Analysis



Just position the probe in the exhaust pipe once the calibration phase is over!



To obtain accurate measurement values it's important to re-calibrate the instrument after each measurement (at the latest after one hour)!

Once the calibration cycle is over, the instrument enters the measurement mode. The measurement values could be displayed on 4 screen pages (3 x gas analysis; 1 x draught measurement – change with cursor keys):

O2	4.0 %
CO2	12.5 %
T.Air	20 °C
T.Gas	212 °C

O2	4.0 %
CO2	12.5 %
CO	30 ppm
Lambda	1.23

O2	4.0	%
CO2	12.5	%
CO	30	ppm
Lambda	1.23	
T.Gas	166	°C
T.Air	20	°C
Losses	7.0	%
Eta	93.0	%

The position of the measured and calculated values (gas analysis) can be selected freely on the display. To change the position or the composition, please proceed as follows:


- with **<Enter>** / **<Display values>** / **<Enter>** activate the first line on the display
- choose with cursor key the measured or calculated value
- with **<Enter>** activate the next line on the display and so on
- with **<ESC>** or **<Enter>** in the last line you leave this process.

The values for CO₂, Efficiency, Losses, Lambda and the Dew Point are calculated values. They just can be calculated when realistic figures for the basic values like O₂ and the temperature are available. It must be assured that:

O₂ < 20,7 %

The dew point can just be calculated correctly if in the menu "Adjustments / Air pressure" the current barometric air pressure has been entered. If the combustion gas temperature falls below the dew point /between 25 and 65°C) the efficiency will be calculated with condensation gain. In this case a (C) is displayed behind the efficiency. Correct measurement values are displayed after a delay of 1 to 1,5 minutes necessary for the gas transport to the sensors and to establish a stable electrochemical reaction in the sensors. For storage and printing wait for the values to become stable. If the gas value still fluctuates for more than 2 ppm, the reason could be in an unstable draft condition in the gas channel.

Once the measurement values are stable and the results can be printed, press **<record>** to transfer the values to the temporary memory. Data will be stored here for later printout (the values of the temporary memory could be checked by pressing **<Enter>** / **<Memory>** / **<Enter>**. While checking the values the gas pump will be switched off in order to spare the sensors. (back with **<ESC>**).

O2	4.0	%	
CO2	12.5	%	
CO	30	ppm	
Lambda	1.23		
T.Gas	166	°C	
T.Air	20	°C	
Losses	7.0	%	
Eta	93.0	%	

**Measurement stored
in temporary memory**

CO-switch-off with purging pump (option)

The internal program protects the CO-sensor for overload. In case the limit of 2500 ppm or 4000 ppm (CO sensor with H₂) is exceeded a second pump switches on and purges the sensor with fresh air. After sufficient purging time (blinking: "CO"), the sensor can be brought back to the measurement mode with **<Enter> / <CO MV ON/OFF> / <Enter>** (the sensor can also manually be switched off by pressing **<Enter> / <CO MV ON/OFF> / <Enter>**).

4.3. Draft Measurement

The gas measurement mode already provides a trend indication of the draught conditions in the combustion gas channel. As the pressure sensor is very sensitive and tend to drift, the value will not be recorded by pressing **<record>**. It is therefore recommended to recalibrate this sensor prior to the actual measurement and results printing.

The current value will be displayed as well as the remark to reset the zero point of the sensor. Therefore disconnect the draught hose from the instrument and press the key **<CAL>**. By this the sensor is calibrated.

Draught
Draft -0.12 hPa
Val.: - . - - hPa
Set zero point →**←

Connect the draught hose again with the instrument. The exact measurement value is displayed now and can be stored by pressing **<record>** and added to the other values already in the temporary memory. The stored value will appear on the display.

Draught
Draft -0.12 hPa
Val.: -0.12 hPa
Set zero point →**←

4.4. Soot...Oil trace

Under „**Soot...Oil trace**“ the measurement results for boiler temperature, soot number and oil derivative can be entered. Select the corresponding line in the display and activate the entry by **<Enter>**. The input for boiler temperature and soot number (3 measurements) can be done as follows:

- select with the keys **<record>** (left) and **<Print>** (right) the position which should be changed (corresponding field is blinking)
- enter the designated number with the cursor keys **<up/down>**

By pressing the key **<Enter>** the entry will be transferred to the data record of the measurement. The result of the oil derivative checking will be documented as follows:

- set cursor to line **“Oil trace”**
- select the result with the key **<Enter>**
(**“No”**, **“Yes”** or **“- - - “**)

Soot...Oil trace	
T.Boiler	--- °C
1.Soot meas.	---
2.Soot meas.	---
3.Soot meas.	---
Oil trace	---
Input:	<input type="checkbox"/>

When all necessary entries have been made the entry can be closed by pressing the key **<ESC>**. The measurement is now completed.

4.5. Record and print measurement result



After the gas analysis, please transfer the recorded data (intermediate memory) into the internal instrument memory otherwise the values will get lost by instrument switch-off!

After scrolling back to the gas measurement with the cursor keys **<up/down>** the measurement can be transferred to the internal memory with **<Enter>** / **<Store to memory>** / **Enter** (after successful storage an **“M”** will appear right down in the display). Finally a print-out of the results can be made (key **<Print>**).

Display/Memory
Memory
Store to memory
Display values
CO MV ON/OFF
Continue with: <input type="checkbox"/>

4.6. After Measurement



Let the probe cool down before stowing them!



Check the condition of the particle filter! He should be replaced when the contamination of the filter is equivalent to a soot number of approx. 2 - 3.



Empty the water trap before transport of the instrument!

Emptying the water trap:

1. Pull the drain hose
2. Drain the condensate
3. Attach the drain hose again

5. Mean value (option)

By mean value measurement function, measurements can be sampled within an adjustable time frame and mean values can be calculated. Should the several measurement values or the mean value result be stored a storage place has to be selected as described in chapter 4.


Once the fresh air calibration is completed, select the menu point „**Mean values**“. Before starting, the parameters „**Measurement time**“ and „**Scanning**“ should be checked or modified if need be. The meaning is respectively:

- **Measurement time** = Time frame during which the mean values will be sampled
- **Scanning** = Time interval between the measurements considered for mean value calculation

„**Measurement time**“ and „**Scanning**“ can be adjusted as follows:

- select menu point and confirm with **<Enter>**
- set the desired time using the cursor keys

Comb.measure.
Mean value
Atmosph. boiler
Burn. w. blower
Diagnosis gas
Pressure tests
Data processing
Adjustment
Control

Mean value
Start
Meas. time
Scanning
Continue with : 

After adjustment / control the measurement can be started by **<Start>** / **<Enter>**. With the cursor keys **<up/down>**, it is possible to switch between current and average readings. The measurement can be interrupted by pressing **<Standby>** (pressing **<Standby>** again sets the measurement continued).

6. Measurement Routines (Option)

The ecom-CL2 provides measurement routines which makes stand-ard checking on atmospheric boilers and fan burners easier.

6.1. Atmospheric Boilers


Select from the main menu the sub menu „**Atmosph. Boilers**” and press **<Enter>**. The table of fuel types will be displayed. Following fuel types can be selected:

 
Natural gas (B)
Town gas (B)
Coke gas (B)
Liquid gas (B)

 
Select with the arrow keys the correspond- ing fuel type and confirm by pressing **<Enter>**. The measurement “**Draft / Pressure**” is displayed. To operate the measurement (0-100 hPa) the draught hose must be connected. In case of deviations of the zero point it could be reset by pressing **<CAL>**.


Connect the draught hose to the instru- ment. After the pressure has stabilised it can be stored by pressing **<record>** for later printout. By pressing the key **< record >** again the value will be deleted. Using the cursor **<down>** it could be get to the next measurement.


Operate the following pressure measure- ment as described above. Not needed measurements can be skipped by using the cursor key **<down>** (these will not be printed).

Type of fuel
Natural gas (B)
CO2max : 11.8
A1-fact. : 0.37
Select with 

Atmosph. boiler
Connection pressure
24.7 hPa
Val.: 24.7 hPa
Set zero point 

Atmosph. boiler
Flow pressure
21.1 hPa
Val.: 21.1 hPa
Set zero point 

Atmosph. boiler
Nozzle pres pa. load
4.4 hPa
Val.: 4.4 hPa
Set zero point 

Atmosph. boiler
Nozzle pres fu. load
13.1 hPa
Val.: 13.1 hPa
Set zero point 

Another feature of the ecom-CL2 is to determine the thermal capacity brought to the boiler. For this the gas meter has to be observed. By pressing **<Enter>** a stopwatch can be started and stopped. The amount of gas consumed in the meantime is necessary for calculation and is entered as follows:

1. Select the position which should be changed with the keys **< record >** (left) and **<Print>** (right) (corresponding field flashes)
2. Set the value by using the cursers **<up / down>**.

After setting and confirmation by pressing **<Enter>** the result of the calculation will be displayed and stored. Calculation can be repeated if needed. For calculation following heating values are taken:

- Natural gas (B) = 9,53 kWh/m³
- Town gas (B) = 5,00 kWh/m³
- Coke gas (B) = 4,83 kWh/m³
- Liquid gas (B) = 25,90 kWh/m³

By using the curser **<down>** it can be scrolled to the next measurement „**Pressure free**“. Here is the option for another pressure measurement.

At the next point of the routine (Curser **<down>**) is the option of determination of a temperature difference (W. Temp. warm – W. Temp. cold).

Atmosph. boiler
Gas flow rate
- - . - m3/h
Perfo. - - . - kW
Start : <input checked="" type="checkbox"/>

Atmosph. boiler
Gas flow rate
Time: 1 sec
Continue with : <input checked="" type="checkbox"/>


Atmosph. boiler
Gas flow rate
0.100 m3
<input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/>

Atmosph. boiler
Gas flow rate
4.9 m3/h
Perfo. 46.7 kW
Start : <input checked="" type="checkbox"/>

Atmosph. boiler
Press. free
14.3 hPa
Val.: 14.3 hPa
Set zero point →**←


Atmosph. boiler
W. Temp. cold
22 °C
Val.: 22 °C
Continue with : <input checked="" type="checkbox"/>

For determination of the two temperatures the T-Room probe is used (waterproof version).


Atmosph. boiler	
W. Temp. warm	48 °C
Val.:	48 °C
Continue with : 	

Storage of the measurement values (after getting stable) is done by the key **<record>**.

By using the curser **<down>** it can be scrolled to the next measurement **“Temp. free”**. Here is the option for another temperature measurement.

Atmosph. boiler	
Difference	26 °C
Continue with : 	

After storing the temperatures the CO-measurements are next. By pressing the curser **<down>** a 1-minute calibration cycle starts for flashing the sensors with fresh air. During calibration cycle the probe must not be positioned in the combustion tube. After calibration cycle the CO-content of the surrounding air can be determined. Use the probe to check the area around the boiler. Beside the stored value (press key **<record>**) the instrument stores the maximum CO-value of the measurement.

Atmosph. boiler	
Temp. free	34 °C
Val.:	34 °C
Continue with : 	

Next point of the routine (curser key **<down>**) is the CO-value in the combustion tube of the boiler which is determined. For measurement the probe must be positioned in the combustion tube. Apart from the stored value the maximum CO-value of the measurement is stored.

Atmosph. boiler	
CO ambient	6 ppm
Val.:	6 ppm
CO max:	9 ppm

Atmosph. boiler	
CO flue gas	21 ppm
Val.:	21 ppm
CO max:	26 ppm

After storing the CO-values the next point are the draught measurements (curser key **<down>**). For exact measuring it's recommended to reset the sensor to zero. Remove the draught hose off the instrument and press **<CAL>**. The zero point of the sensor is set now. After the draught has stabilised it can be stored for later printout by pressing the key **<record>**:

Atmosph. boiler	
Draft	-0.04 hPa
Val.:	-0.04 hPa
Set zero point →**←	

At the end of the measurement routine (curser down) it is checked whether a gas leakage at the unit could be determined. Confirmation could be done by using the key **<Enter>** (yes / no).


Atmosph. boiler	
Gas leakage	
No	
Change:	<input checked="" type="checkbox"/>

The printout of all results of the measurement routine could be done by pressing **<Print>**.

6.2. Fan burners

Select from the main menu the sub menu “**Fan burner**” and press **<Enter>**. The table of fuel types will be displayed. Following fuel types can be selected:

Natural gas (B)
 Town gas (B)
 Coke gas (B)
 Liquid gas (B)

Type of fuel
Natural gas (B)
CO2max : 11.8 A1-fact. : 0.37
Select with 

Select with the arrow keys the corresponding fuel type and confirm by pressing **<Enter>**.

6.2.1. Gas fan burners

Selecting a gas fuel type the routine starts with the measurement “**Connecting pressure**”. To operate the measurement (0-100 hPa) the draught hose must be connected. In case of deviations of the zero point it could be reset by pressing **<CAL>**.

Connect the draught hose with the instrument. After the pressure has stabilised it can be stored by pressing **<record>** for later printout. By pressing the key **<record>** again the value will be deleted. Using the cursor **<down>** it could be get to the next measurement.

Operate the following pressure measurement as described above. Not needed measurements can be skipped by using the cursor key **<down>** (these will not be printed).

Burn. w. blower
Connection pressure 22.1 hPa Val.: 22.1 hPa
Set zero point →**←

Burn. w. blower
Flow pressure 18.7 hPa Val.: 18.7 hPa
Set zero point →**←

Burn. w. blower
Nozzle pres pa. load 6.4 hPa Val.: 6.4 hPa
Set zero point →**←

Burn. w. blower
Nozzle pres fu. load 13.0 hPa Val.: 13.0 hPa
Set zero point →**←

Another feature of the ecom-CL2 is to determine the thermal capacity brought to the boiler. For this the gas meter has to be observed. By pressing **<Enter>** a stopwatch can be started and stopped. The amount of gas consumed in the meantime is necessary for calculation and is entered as follows:

1. Select the position which should be changed with the keys **<record>** (left) and **<Print>** (right) (corresponding field flashes)
2. Set the value by using the cursers **<up / down>**.

After setting and confirmation by pressing **<Enter>** the result of the calculation will be displayed and stored. Calculation can be repeated if needed. For calculation following heating values are taken:

- Natural gas (B) = 9,53 kWh/m³
- Town gas (B) = 5,00 kWh/m³
- Coke gas (B) = 4,83 kWh/m³
- Liquid gas (B) = 25,90 kWh/m³

By using the curser **<down>** it can be scrolled to the next measurement „**Pressure free**“. Here is the option for another pressure measurement.

At the next point of the routine (Curser **<down>**) is the option of determination a temperature difference (W. Temp. warm – W. Temp. cold). For determination of the two temperatures, the T-Room probe is used (waterproof version).

Burn. w. blower
Gas flow rate - - - m3/h
Perfo. - - - kW
Start :

Burn. w. blower
Gas flow rate Time: 1 sec
Continue with :

Burn. w. blower
Gas flow rate 0.100 m3


Burn. w. blower
Gas flow rate 4.2 m3/h
Perfo. 40.0 kW
Start :

Burn. w. blower
Press. free 4.5 hPa
Val.: 4.5 hPa
Set zero point →**←

Burn. w. blower
W. Temp. kalt 21 °C
Val.: 21 °C
Continue with :


Burn. w. blower
W. Temp. warm 54 °C
Val.: 54 °C
Continue with :

Storage of the measurement values (after getting stable) is done with the key **<record>**.


Burn. w. blower	
Difference	33 °C
Continue with : 	

By using the cursor **<down>** it can be scrolled to the next measurement **“Temp. free”**. Here is the option for another temperature measurement.


After storing the temperatures the measurement of the combustion gases are next. By pressing the cursor **<down>** a 1-minute calibration cycle starts for flashing the sensors with fresh air. During calibration cycle the probe must not be positioned in the combustion tube. After calibration cycle, the combustion measurement at part capacity can be started. For measurement the probe must be positioned in the combustion tube. Measurement will be stated by pressing **<Enter>**. After 90 seconds the measured values will be automatically stored for later printout.

Burn. w. blower	
Temp. free	37 °C
Val.:	37 °C
Continue with : 	

Next point of the routine is the combustion measurement at full capacity by pressing **<Enter>**. Also here the values will be measured after 90 seconds.

CO2	9.6 %
O2	4.0 %
CO	30 ppm
Eta	93.0 %
T.Gas	166 °C
T.Luft	20 °C
Parti. load Start : 	

After finishing the combustion measurement the CO-value of the surrounding air can be determined. Use the probe to check the area around the boiler. Besides the stored value (press **<record>**) the instrument stores the maximum CO-value of the measurement.

CO2	9.6 %
O2	4.0 %
CO	30 ppm
Eta	93.0 %
T.Gas	166 °C
T.Luft	20 °C
Full load Start : 	

Burn. w. blower	
CO ambient	5 ppm
Val.:	5 ppm
CO max:	9 ppm

At the end of the measurement routine (curser **<down>**) it is checked whether a gas leakage at the unit could be determined. Confirmation could be done by using the key **<Enter>** (yes / no).

Burn. w. blower
Gas leakage No
Change :

The printout of all results of the measurement routine could be done by pressing **<Print>**.

6.2.2. Oil fan burner

Using Heating oil (B) as fuel type the routine starts by determining the oil flow and the thermal capacity brought to the boiler. Open the menu **<Oil pressure>** by pressing **<Enter>**. Enter the measured oil pressure as follows:

Burn. w. blower
Oil rate -- . - kg/h
Perfo. -- . - kW
Input :

1. Use the keys **<record>** (left) and **<Print>** (right) to come to the positions which should be changed (corresponding field is flashing).

Burn. w. blower
Oil press. 12.00 bar

2. Set the number by using the curser keys.

After setting and pressing **<Enter>** the sub-menu nozzle size will be opened. Enter the used nozzle size like described above.

Burn. w. blower
Nozz. size 0.60 Gal/h

After setting and pressing **<Enter>** the result of the calculation will be displayed. The calculation can be repeated if needed. For calculation following heating values are taken:

Burn. w. blower
Oil rate 2.5 kg/h
Perfo. 29.7 kW
Input :

Heating oil (B) = 11,86 kWh/kg

At the next point of the routine (cursor **<down>**) there is the option of determination of a temperature difference (W. Temp. warm – W. Temp. cold). For determination of the two temperatures the T-Room probe is used (waterproof version).

Burn. w. blower
W. Temp. cold
21 °C
Val.: 21 °C
Continue with :

Storage of the measurement values (after getting stable) is done by the key **<record>**.

Burn. w. blower
W. Temp. warm
54 °C
Val.: 54 °C
Continue with :

By using the cursor **<down>** it can be scrolled to the next measurement **“Temp free”**. Here is the option for another temperature measurement.

Burn. w. blower
Difference
33 °C
Continue with :

After storing the temperatures, the measurement of the combustion gases are next. By pressing the cursor **<down>** a 1-minute calibration cycle starts for flashing the sensors with fresh air. During calibration cycle the probe must not be positioned in the combustion tube. After calibration cycle, the combustion measurement at part capacity can be started. For measurement the probe must be positioned in the combustion tube. Measurement will be started by pressing **<Enter>**. After 90 seconds the measured values will be automatically stored for later printout.

Burn. w. blower
Temp. free
37 °C
Val.: 37 °C
Continue with :

Next point of the routine is the combustion measurement at full capacity by pressing **<Enter>**. Also here the values will be measured after 90 seconds.

CO2	12.5 %
O2	4.0 %
CO	30 ppm
Eta	93.0 %
T.Gas	166 °C
T.Air	20 °C
Parti. load	Start :

The printout of all results of the measurement routine could be done by pressing **<Print>**.

CO2	12.5 %
O2	4.0 %
CO	30 ppm
Eta	93.0 %
T.Gas	166 °C
T.Air	20 °C
Full load	Start :

6.3. Diagnosis gas

Select from the main menu the sub menu “**Diagnosis Gas**” and press **<Enter>**. The table of fuel types will be displayed. Following fuel types can be selected:

- Natural gas (B)
- Town gas (B)
- Coke gas (B)
- Liquid gas (B)

Type of fuel
Natural gas (B)
CO2max : 11.8
A1-fact. : 0.37
Select with

Select with the arrow keys the corresponding fuel type and confirm by pressing **<Enter>**.

First the thermal capacity brought to the boiler can be determined with the ecom-CL2. For this the gas meter has to be observed. By pressing **<Enter>** a stopwatch can be started and stopped. The amount of gas consumed in the meantime is necessary for calculation and is entered as follows:

Diagnosis gas
Gas flow rate
- - . - m3/h
Perfo. - - . - kW
Start :

1. Select the position which should be changed with the keys **<record>** (left) and **<Print>** (right) (corresponding field flashes)

Diagnosis gas
Gas flow rate
Time: 1 sec
Continue with :

2. Set the value by using the cursers **<up / down>**.

Diagnosis gas
Gas flow rate
0.100 m3

After setting and confirmation by pressing **<Enter>** the result of the calculation will be displayed and stored. Calculation can be repeated if needed. For calculation following heating values are taken:

Diagnosis gas
Gasdurchsatz
2.0 m3/h
Perfo. 19.1 kW
Start :

- Natural gas (B) = 9,53 kWh/m³
- Town gas (B) = 5,00 kWh/m³
- Coke gas (B) = 4,83 kWh/m³
- Liquid gas (B) = 25,90 kWh/m³

After determination of the burning capacity the next point of the routine is the CO-measurement. By pressing the curser **<down>** a 1-minute calibration cycle starts for flashing the sensors with fresh air. During calibration cycle the probe must not be positioned in the combustion tube. After calibration cycle the CO-content of the surrounding air can be determined. Use the probe to check the area around the boiler. Beside the stored value (press key **<record>**) the instrument stores maximum CO-value of the measurement.

Diagnosis gas	
CO ambient	0 ppm
Val.:	--- ppm
CO max:	0 ppm


Next point of the routine (curser key **<down>**) the CO-value in the combustion tube of the boiler is determined. For measurement the probe must be positioned in the combustion tube. Apart from the stored value the maximum CO-value of the measurement is stored.

Diagnosis gas	
CO flue gas	0 ppm
Val.:	--- ppm
CO max:	26 ppm

After storing the CO-values the next point are the draught measurements (curser key **<down>**). For exact measuring it's recommended to reset the sensor to zero. Remove the draught hose off the instrument and press **<CAL>**. The zero point of the sensor is set now. After the draught has stabilised it can be stored for later printout by pressing the key **<record>**.

Diagnosis gas	
Draft	-0.12 hPa
Val.:	-.-. hPa
Set zero point →**←	

At the end of the measurement routine (curser down) it is checked whether a gas leakage at the unit could be determined. Confirmation could be done by using the key **<Enter>** (yes / no).

Diagnosis gas	
Gas leakage	
No	
Change : 	

The printout of all results of the measurement routine could be done by pressing **<Print>**.

7. Adjustments

In addition to the already described features of the **ecom-CL2**, various settings could be made at the instrument. Select from the main menu the sub-menu **<Adjustment>** and confirm with **<Enter>**. A list of the possible settings is displayed and can be changed according to usage. Scroll the curser to the corresponding line and press **<Enter>**:

Set clock

- scroll with **curser keys** to the value which should be changed
- activate the setting by pressing **<Enter>**
- set the time by using **curser keys**
- confirm the setting by pressing **<Enter>**
- after finishing leave the menu with **<ESC>**

Display contrast

- set display contrast with **curser keys**
- reset with **<CAL>**

Printer contrast

- set printer contrast with **curser keys**
- reset with **<CAL>**

Type of fuel

- set fuel type with **curser keys**

Set clock
Display contrast
Printer cont.
Type of fuel
Unit
O2 refer.
Air press.
Keyboard beep
AUX(COM)
Bluetooth
Eta(C)
Standby
Printout
Language English

Unit

-set unit with **curser keys**:

-ppm = volume concentration (parts per million)

-mg/m³ = mass concentration unit

-mg/kWh 0,0 % = Mass concentration per capacity unit calculated with reference O₂

-ppm 0,0 % = volume concentration (parts per million) calculated with reference O₂

-mg/m₃ 0,0 % = mass concentration per capacity unit calculated with reference O₂

-calculated with reference O₂ – formula for the calculation:

$$E_{\text{ref}} = E_{\text{meas}} * \frac{21 - O_{2\text{ref}}}{21 - O_{2\text{meas}}}$$

O₂ Reference

-set reference oxygen value O_{2ref} with **curser keys**

-reset by pressing <CAL>

Air pressure

-set barometric pressure for calculation of dew point with **curser keys**

-Reset by pressing <CAL>

Keyboard beep

-set signal when hitting the keys with **curser keys**

-reset by pressing <CAL>

AUX(COM)

-Adjustment of transfer speed with **<CAL.>**
(1200 -112500 Baud)

Online data (set with **cursor keys**):

Adjustment witch data should be sent:

-No protocol: data transfer to software "miniDV"

-Remote: only for special applications

-DAS: online data transfer to software „DASNT“(1200 Baud) The software "miniDV" and „DASNT“ are available free of charge at www.ecom.de.

Bluetooth

(**<BLE>** no adjustment needed):

-Online data = Remote

Eta(C)

-set efficiency calculation with or without condensation gain
with **cursor keys**

Standby (not available with every device version)

-set the time after which the device will automatically
switch to Standby with the **cursor keys**

Printout

-create a protocol feet (8 x 24 digits)

-put in the text for line one as follows:

1. activate symbol selection with **<Standby>**
2. select keyboard with **<CAL.>** (5 keyboards are available)
3. choose a symbol with **<record>** (left), **<Print>** (right) and cursers **<up / down>**
4. take the symbol with **<Enter>**
5. repeat (2. - 4.) until line 1 is finished
6. deactivate choosing symbols with **<Standby>** and change with curser **<up>** to line 2.
7. after finishing the input for all lines leave the menu with **<ESC>**

Language (not available with every device version)

-set the language with **<Enter>**

8. Control

The electrochemical sensors used for gas analysis are submitted to a wearing process and age. Along the operation period, they alter their output values depending on the gas concentration, flow duration and soiling degree of the measured gases. The programme controls the sensors and corrects drifts. If drifts and the correlated measurements errors increase, an error message is displayed. In this case the corresponding sensors must be changed by one of our authorised service centres. The actual status of the sensors is displayed in the control menu. Additionally on two more pages will be displayed (change the display pages by using the cursors):

-the battery voltage (charging status)
displayed in all menus as symbol:

Battery full Battery ½ full Battery empty



O2	1034 mV
CO	-10 mV
Batt	6.42 Volt
Tel.No. 02371/945-5	
Ins.No. CL2-0009 V1.5	
Further info with	

- the phone number of next service centre
- the serial number
- the software version
- the number of done measurements
- the date of next service
- the number of CO switch offs
- the number of error occurred

Measurements	1521
Service date	23.06.17
CO-Überläufe	0
Error counter	00
Tel.No. 02371/945-5	
Ins.No. CL2-0009 V1.5	
Further info with	

-list of last service

Last service	
26.06.16	103 hrs
10.06.15	073 hrs
31.05.14	035 hrs
-- . -- . --	
-- . -- . --	
Further info with	


9. Data processing (Option)

9.1. Communication

The menu „**Data processing**“ allows the selection of the following functions:

Select:

This sub-menu enables to search for or create a data record for the allocation of measurement values (see chapter 3.).

Data processing
Select
Look at
Load data
Send data
Format memory
Continue with : 

Look at:

The recorded values of the selected data record can be viewed (see chapter 3.).

Load data:

Possibility of data import e.g. from ecom software (available at „www.ecom.de“ - check the transfer options of your software).

Proceed as follows:

1. Connect instrument and PC with a current RS232 cable.
2. Select „**Load data**“ and confirm with **<OK>**.
3. Answer following question with **Yes** (select with cursor keys).
4. Start the data transfer at the PC.

Send data:

The data record completed with values can be transferred to the PC programme using this function (procedure identical to „**Load data**“).

Format:

This function is normally only needed by the initial adjustment of the instrument by the manufacturer (preparation of internal memory to data receipt). **Caution: All recorded values will get lost!**

9.2. Data processing with App

To display and storage of measured values, the App "**ecomMAND-ER**" for smartphones (iOS or Android) is available (Bluetooth LE needed). Test results are stored along with customer information in a pdf-file and can be sent f.e. as email attachment. Links to free download of the Apps can be found on the ecom website.

10. Maintenance Tips

To secure the accuracy of your measuring instrument we recommend the annual check by an authorized ecom partner. In the case of strong demand (e.g. permanent several hours of measurement per day, rough conditions etc.) shorter intervals between checks should be selected - please contact your ecom partner. All ecom partners are listed under www.ecom.de. Do not use other sensor than supposed by our factory and be aware that service done by service stations not authorised by ecom will lead to expiration of any warranty.

The following tips for the daily care of accessible parts and components should be helpful:

Dust filter on top of the water trap

Unscrew the top cap of the water trap and check the condition of the particle filter. When the filter becomes grey it should be changed (soot number approx. 2-3).



Fine dust filter

Sensors

Each time the instrument is switched on the sensors are calibrated with fresh air. The instrument permanently monitors the condition of the sensors. New sensors wear out from use in time due to reaction (O₂-sensor) and due to soiled gases respectively gases in concentrations beyond the nominal range (toxic sensors). The output values of the sensors are (see menu "**Control**"):

O₂ 1100 - 1400 mV
CO 0 mV (+/- 30)
NO 0 mV (+/- 30)

If an error message is displayed during calibration cycle and does not disappear after repeated calibrations the instrument must be sent to a service centre. The O₂ sensor should show > 300 mV, otherwise it should be changed.

The CO-sensor is protected by the internal program for overload. In case the limit of 4000 ppm is exceeded the gas pump is switched off.

Power supply

The battery ensures a main power independent operation. The battery is automatically charged when the instrument is connected to the main power supply. (Please do not interrupt the charging shortly since the charging circuitry could operate faulty.) The recharge of the battery should be done in any case if the voltage display (menu “**Control**”) is less than 5.8 V (Instrument will stop working at 5.5 V).

Sampling probe and hose

Depending on the frequency of use the probe and the hose must be cleaned regularly, thus in order to prevent particles from lodging and early wear due to corrosion.

The hose can be cleaned after all connections on the instrument and the probe itself have been switched off (use warm water and then blow out to dry)

Replace paper roll

Unlock the printer by pulling on the tab on the printer cover. Remove the plastic holder of the spent paper roll and insert the new paper roll as shown. Leave some paper stand out and close the printer cover.



11. Technical Data

Parameter	Range	Measurement principles
O ₂	0 ... 21 vol.%	electrochemical
CO (without H ₂)	0 ... 2000 ppm	electrochemical
CO (with H ₂ -Option)	0 ... 10000 ppm	electrochemical
NO (Option)	0 ... 5000 ppm	electrochemical
CO ₂	0 ... CO _{2max}	calculated
T-G	0 ... 500 °C	NiCr-Ni
T-R	0 ... 100 °C	semiconductor
Pressure	0 ... +/- 100 hPa	DMS-bridge
Efficiency	0 ... 120 %	calculated
Losses	0 ... 99,9 %	calculated
Lambda	1 ... ∞	calculated
CO-undiluted (reference-O ₂ ; adjustable)		calculated
Dew point of combustion gases		calculated

Power Supply Power adapter 110 - 230 V~ / 50 - 60 Hz;
Battery 6 V / 3,3 Ah

Bluetooth LE Transmission power: < 5,5 mW
Frequency range: 2402 – 2480 MHz
(CYBLE 202007-01)

Display graphic display, backlit

Size 321 mm x 225 mm x 97 mm (W x H x D)

Weight approx. 3 kg (complete with sampling system)

Application limits +5 °C to +40 °C;
max. 90 % RH, non-condensing

Protection IP 40

Subject to technical changes
V2.0/ 01.2023

12. FAQ

- Where do I find important instrument information? In the menu „Control“ all important instrument information are shown (e.g. battery voltage, sensor values, unit number, next service date, operation hours etc.). With the arrow keys stands you can switch to the second page.
- How long is the life span of the sensors? The life span depends on the operating hours and the instrument equipment. The life span of the toxic sensors (CO, NO, SO₂, NO₂) is affected by high gas concentrations and a not sufficient purging. The life span for these sensors amounts to on the average between 4 and 6 years. The life span of the O₂ sensor is independent of the operating hours and amounts to approx. 4 years.
- Which sensors can I exchange? Please contact the next authorised service centre for changing sensors.
- The instrument shows the error message „O₂ sensor 0 mV“! The sensor must be renewed.
- The instrument shows the message „Check required“! This message appears automatically every 12 months or after 250 operating hours. Note: This is a recommendation to let check the instrument. The instrument is however still ready for use.
- The instrument shows the error message „T-Gas“ or „T-Air“! Possible reasons could be:
- Cable is broken (at the plug)
- T-Air sensor is broken
- Thermocouple is broken
- Cable is defective
Note: The error messages can be ignored at the CL2 by pressing „Enter“. Calculations that depend on these temperatures are not implemented.
- The instrument shows wrong or inaccurately CO₂ values! Possible reasons could be:
- O₂ is defective (CO₂ values are calculated from the O₂ values)
- Pump is not working correctly
- Leakage in the gas way
- condensate trap / gas cooler is clogged

My instrument cannot be switched on!

- Please check the mains cable
- Please check the fuse
- Please check mains connection (Plug socket switched on?)
- Please load the accumulator min. 8 hours (Accumulator could be over-discharged)

My instrument does not print!

Please check whether the printer paper is correctly inserted. The thermal printer writes only on the thermally sensitive side. Please use always the correct paper for the printer, you will prevent defects at the printer. Please make sure that the printer is clean (no chads in the drive).

Can I change the printout? You can change the printout (Menu: "Adjustments").

Hint: If you have several instruments of the same type, you can locate an error by exchanging the accessories (probe, hose, temperature sensor etc.).

If further questions or problems should arise, please contact the next authorised service centre.

EG-Konformitätserklärung | EC Declaration of Conformity

Hiermit erklärt der Hersteller
The manufacturer

ecom GmbH
Am Großen Teich 2
D-58640 Iserlohn, Germany



in alleiniger Verantwortung für die Ausstellung dieser Erklärung, dass die nachfolgend aufgeführten Produkte:
hereby declares under its sole responsibility, that the products

Abgasanalysegeräte / flue gas analysis devices

Type: ecom-B

ecom-J2KNpro

ecom-CL2/ B+

ecom-J2KNpro IN / -J2KNpro INS

ecom-D

ecom-J2KNpro TECH

ecom-EN3

ecom-ST

allen einschlägigen Bestimmungen der folgenden EU-Richtlinien entsprechen:
comply with the following European Directives:

2014/53/EU	Funkanlagenrichtlinie / <i>Radio Equipment Directive</i>
2011/65/EU	RoHS
2014/35/EU (*)	Niederspannungsrichtlinie / <i>Low Voltage Directive (*)</i>

(*): Gilt nur für Geräte mit 230 V Eingangsspannung / applies only to devices with 230 V input voltage

Folgende Normen wurden angewendet:
The following standard/s were used:

EN 61010-1:2010/A1:2019	Sicherheitsbestimmungen für elektrische Mess-, Steuer-, Regel- und Laborgeräte <i>Safety requirements for electrical equipment for measurement, control, and laboratory use</i>
EN 300 328 V2.2.2	Breitband-Übertragungssysteme - Datenübertragungsgeräte zum Betrieb im 2,4 GHz-Band <i>Wideband transmission systems - Data transmission equipment operating in the 2,4 GHz band</i>
ETSI EN 301 489-1 V2.2.3	Elektromagnetische Verträglichkeit (EMV) - Standard für Funkeinrichtungen und -dienste – <i>ElectroMagnetic Compatibility (EMC) standard for radio equipment and services</i>
ETSI EN 301 489-17 V3.2.4	Elektromagnetische Verträglichkeit (EMV) für Funkeinrichtungen und -dienste - Teil 17: Spezifische Bedingungen für Breitbanddatenübertragungssysteme <i>ElectroMagnetic Compatibility (EMC) standard for radio equipment and services - Part 17: Specific conditions for Broadband Data Transmission Systems</i>
EN 61326-1:2013	Elektrische Mess-, Steuer-, Regel- und Laborgeräte - EMV-Anforderungen <i>Electrical equipment for measurement, control and laboratory use – EMC requirements</i>
EN 50270:2015/AC:2016-08	Elektromagnetische Verträglichkeit - Elektrische Geräte für die Detektion und Messung von brennbaren Gasen, toxischen Gasen oder Sauerstoff <i>Electromagnetic compatibility - Electrical apparatus for the detection and measurement of combustible gases, toxic gases or oxygen</i>
EN IEC 63000:2018	Technische Dokumentation zur Beurteilung von Elektro- und Elektronikgeräten hinsichtlich der Beschränkung gefährlicher Stoffe <i>Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances</i>

Iserlohn, 25.07.2022



 Matthias Platte (Geschäftsführer / Managing Director)

Declaration of Conformity

The manufacturer

ecom GmbH
Am Großen Teich 2
D-58640 Iserlohn, Germany



hereby declares under its sole responsibility, that the products

Flue gas analysis devices

Type: ecom-B	ecom-J2KNpro
ecom-CL2/B+	ecom-J2KNpro IN / INS
ecom-D	ecom-J2KNpro TECH
ecom-EN3	ecom-ST

comply with the following European Directives:

Radio Equipment Regulations 2017
The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (RoHS)
Electrical Equipment (Safety) Regulations 2016 (*)

(*): applies only to devices with 230 V input voltage

The following designated standards / other technical standards and specifications were used:

EN 61010-1:2010/A1:2019	Safety requirements for electrical equipment for measurement, control, and laboratory use
EN 300 328 V2.2.2	Wideband transmission systems - Data transmission equipment operating in the 2,4 GHz band
ETSI EN 301 489-1 V2.2.3	ElectroMagnetic Compatibility (EMC) standard for radio equipment and services
ETSI EN 301 489-17 V3.2.4	ElectroMagnetic Compatibility (EMC) standard for radio equipment and services - Part 17: Specific conditions for Broadband Data Transmission Systems
EN 61326-1:2013	Electrical equipment for measurement, control and laboratory use – EMC requirements
EN 50270:2015/AC:2016-08	Electromagnetic compatibility - Electrical apparatus for the detection and measurement of combustible gases, toxic gases or oxygen
EN IEC 63000:2018	Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

Iserlohn, 12.10.2022


Matthias Platte (Geschäftsführer / Managing Director)

INTELLIGENT MESSEN!
MEASURE WITH INTELLIGENCE!



ecom GmbH

Am Großen Teich 2

D-58640 Iserlohn

Info@ecom.de

www.ecom.de

Phone: +49 2371 945-5

Fax: +49 2371 40305

UK importer:

DRM Technic Ltd.

15C Raleigh Hall Industrial Estate,

GB-Stafford, Staffordshire, ST21 6JL

sales@drmtechnic.com

www.drmtechnic.com

Phone: +44 (0) 1782 638 491