

INTELLIGENT MESSEN!
MEASURE WITH INTELLIGENCE!

ecom®

English



OPERATION MANUAL

ecom® J2KN^{pro}

Versions

ecom-J2KNpro Easy

ecom-J2KNpro Expert

ecom-J2KNpro Engine

ecom-J2KNpro Industry

Status January 2023

Index

Important hints	3
Important hints for using IR bench.....	4
1. Instrument design	5
1.1. Basic module	5
1.2. Control module	6
2. Gas cooler (option)	7
3. Power supply	8
4. Radio communication basic / control module	9
5. Data record	10
6. Instrument switch on.....	11
7. Input or select plant specific data	13
8. Gas measurement	16
8.1. Gas analysis	16
8.2. CO measurement (gas channel check).....	19
8.3. O ₂ check	20
8.4. Flow measurement (option).....	20
8.5. Biogas measurement (option)	21
8.6. Draught measurement.....	22
8.7. Soot...Oil trace	23
8.8. Measurement record and printout	25
8.9. Printed protocol ecom-J2KN ^{pro}	26
9. Mean Value Measurement	27
10. Adjustments	29
11. Control	34
12. Data Processing	35
12.1. Communication.....	35
12.2. Automatic measurement (option)	36
12.3. Data logger	37
12.4. Data logging with DASNT2.....	38
12.5. Data processing with DAS5.....	38
12.6. Data processing with App.....	39
13. Diagnostics	40
13.1. Fault diagnostic	40
13.2. dT measurement	42
13.3. Heating Check (option).....	42
14. Maintenance tips.....	46
15. Technical Data	49
16. FAQ.....	51

Congratulations!

With your purchase you have decided on a high-quality product of ecom GmbH.

Get to know the product before you start using it while reading carefully the following instructions of use and the safety indications. Use the product only as described and only for the given areas of application in order to ascertain its longevity.

Important hints



**The ecom-J2KN^{pro} meets the requirements of
DIN EN 50379 part of 2.**



**The ecom-J2KN^{pro} may not be used for
continuous emission control!**



**Following minimum times must be kept, in order
to receive correct measured values:**
-1 min. to calibrate the sensors at fresh air
-2 min. for stable measured values



**The following substances impair the working of
the instrument:**

- Cleaning agents
- Degreasers
- Wax polishes
- Adhesives
- Formaldehyde



Adjustments at burners and boilers should be made only by specialists, who are familiar with this installations!



- 1. Charge the accumulator regularly (Charge not used instrument min. once a month)!**
- 2. Never store the instrument with unloaded battery!**

Important hints for using IR bench




Please switch on the instrument 15 min. before starting the fresh air calibration, in order to bring the infrared bench on operating temperature!



Please start every 15 min. a fresh air calibration by using the infrared bench (especially with methane) to get accurate measurements (Adjustments / Re-Calibration)!


1. Instrument design

1.1. Basic module


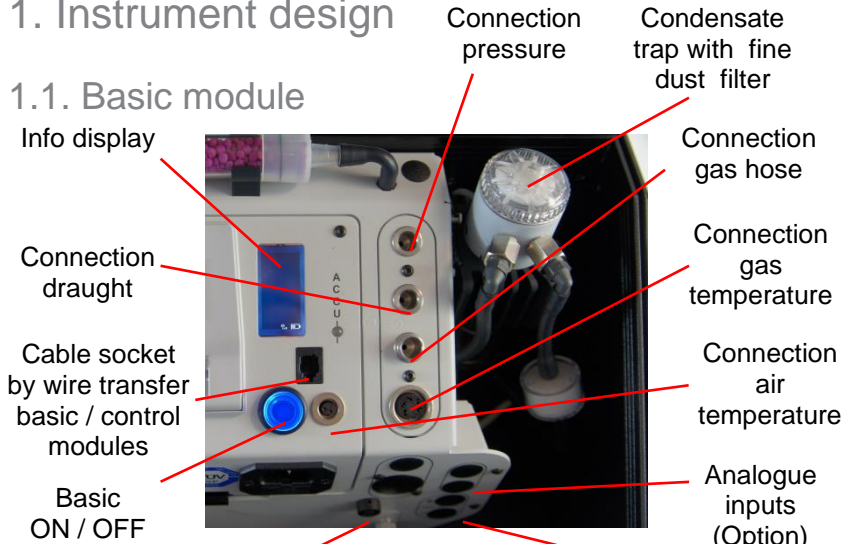


Connection AUX


Connections pitot tube (Option)

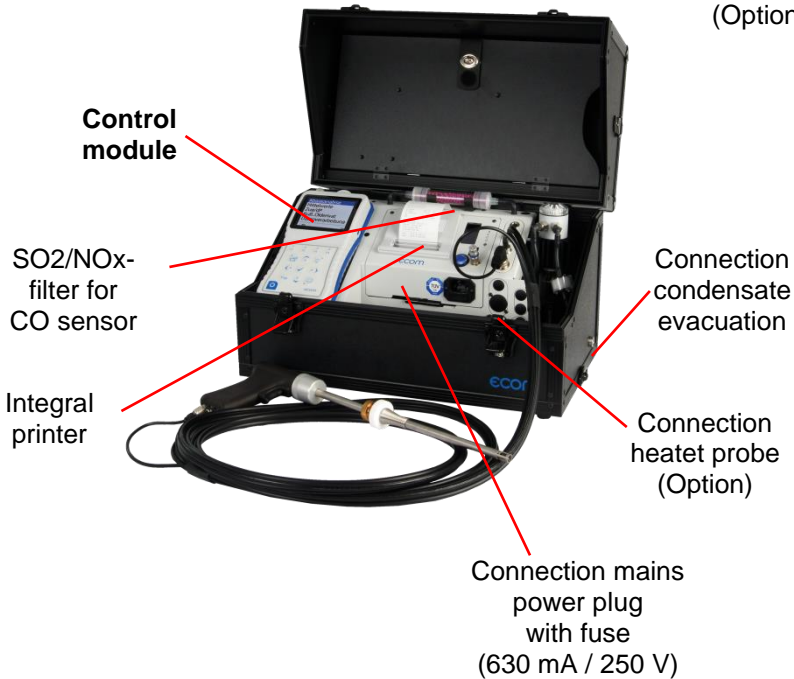

1.2. Control module

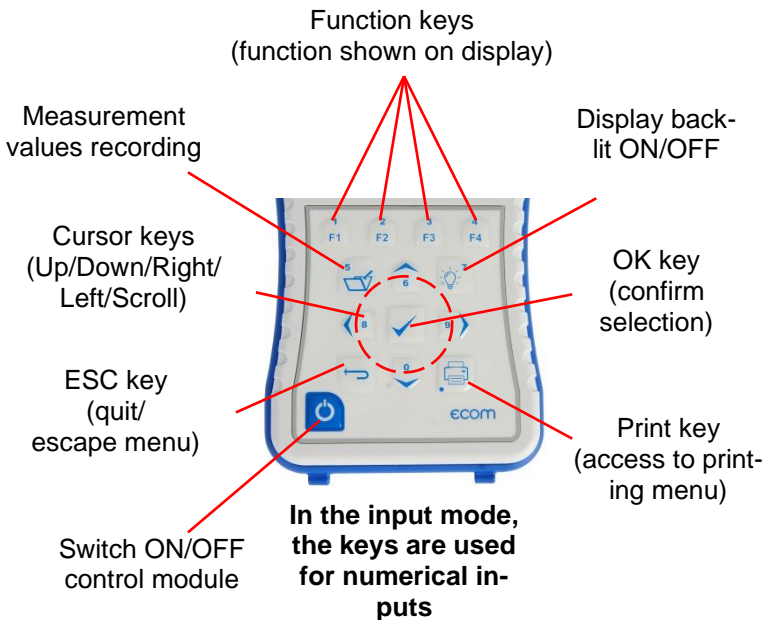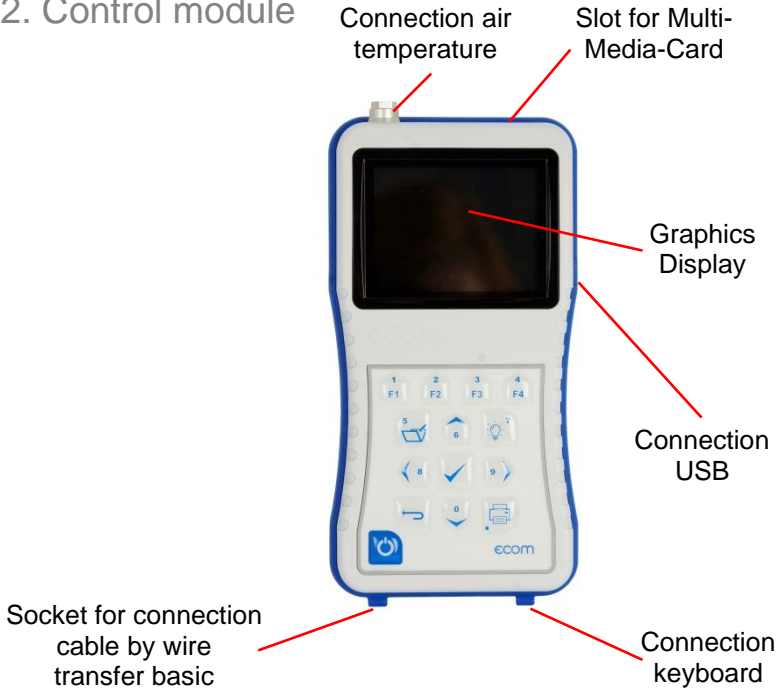

2. Gas cooler (option)

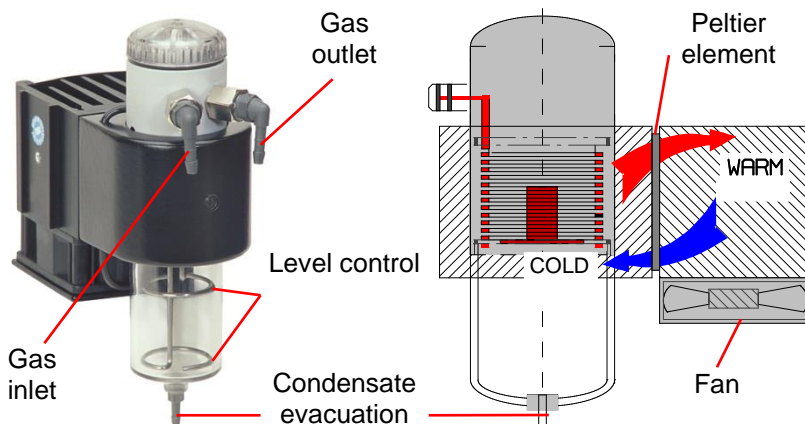

In case of battery operation the power is reduced (output temperature 8 – 10 °C)!

Exhaust gas with a temperature over the steam dew point (35 to 65 °C) is flown spiral via a long gas path thru a surface coated metal body with good thermal conductivity. The gas radiates its heat to this metal body. A PELTIER element (semiconductor cooling element) flown by a continuous current is thermally connected with this body and with a second metal body with cooling ribs and ventilation slots. The flow thru the PELTIER element creates a heat transfer from WARM to COLD, drains the heat of the metal body flown by gas and conveys it to the outer cooling body. This heat is conveyed thru a vertical forced ventilation to the surrounding air.

The condensation issued by the heat loss of the gas drops in a receptacle and is pumped out on request (either by the user or due to the level monitoring) by a periodically working hose pump.

The sucking capacity of the gas conveying pump avoids a sufficient dwell time of the gas with the condensate, so that wash out reactions ($\text{NO}_2 + \text{H}_2\text{O} > \text{H}_2\text{NO}_3$) do not take place.

At the cooler outlet the gas has a temperature of ca. 5 °C with a relative saturation of nearly 100 % relative humidity (corresponds to a water steam content < 7 g/m³).

3. Power supply



Used accumulators can be returned to us or brought to recycling stations of public waste disposal companies respectively accumulators selling stores!

The basic module of the **ecom-J2KN^{pro}** is delivered with internal loading unit. The instrument can be operated upon a longer time period with the internal accumulator (7,2 V; 11,6 Ah). Connecting the internal charging unit to mains power is only compulsory to recharge the accumulators and to operate the heated probe system.

The accumulators should be recharged when the instrument shows a corresponding message (acoustical warning and display information). The accumulators loading stand can be checked, looking at the voltage information on the display (menu "**Control**"). The battery warning is activated when the value „ACC.B“ is smaller than 6,5 V. By 6,0 V the power operation via battery is no more possible. The instrument must be further powered via internal charging unit.



Never use batteries, to operate the control module of the J2KN^{pro}!

The control module of the **ecom-J2KN^{pro}** is powered by 3 nickel-metal-hydride accumulators (type AA). In case of need, the accumulators can be recharged by docking the control module to the basic module.

4. Radio communication basic / control module

Thanks to the detachable control module the basic module can be monitored wireless. The basic module can be unlocked as follows:


1. Press to unlock.
2. Tip control module forwards
3. Release control module from basic module

The information exchange between control and basic module is performed via radio transmission (868 MHz) with a coverage of approx. 70 m (by free sight). The quality of the radio transmission is documented by a bar indication in the main menu of the instrument (long bar = good radio communication).



By interruption of the radio communication, an error message is displayed. By persisting disturbances of the radio communication, a cable (option) can take over the transfer (connection between socket DATA on control unit and socket DATA on basic module).

If the basic module is switched off and the control module not, so the display will show an error message inviting to fix the control module in its docking station (helps also not to forget the control module). Observe this order, quit with **<ESC>** and finally switch off the control module.

Unlocking

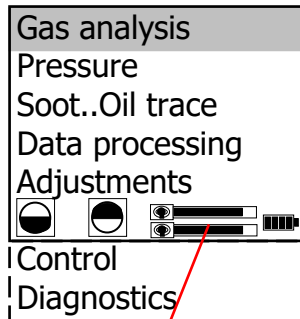

Bar indication

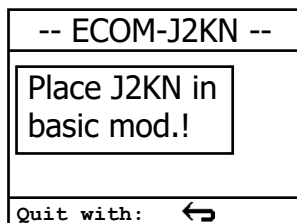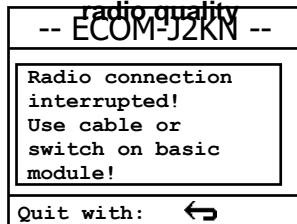

5. Data record

The multi-media card enables the storage of both punctual measurements and data logger records.

The values of punctual measurements are written in a text file (J2KDV.txt). Those of data logger records in a csv file (J2KDL-xx.csv / xx = records numbered consecutively).

Both file types have the same structure and can be imported respectively opened in Excel. See chapter „Technical Data“ for data format information. The files can be transferred on the PC using a card reader. The following conditions must be fulfilled for using a multi-media card:

- **ecom-J2KN^{pro}**
- min. card volume 32 MB - max.32 GB (UHC)
- card formatted on 16 bit FAT or FAT32
- SD cards from SanDisk recommended
- PC with card reader

Insert the multi-media card as shown. Take care that the card does not stand out and hooks on.



Never pull out cards during data record - data loss and damaging of the data carrier possible!

6. Instrument switch on



At temperatures below 10 °C the gas channel plate will be heated with mains power connection – connect instrument to mains power!




Always position the probe in the exhaust pipe once the calibration phase is over!



Always use a filtering system as per our recommendation for combustion plants firing solid combustibles!

Display contrast adjustable with F1 and F2

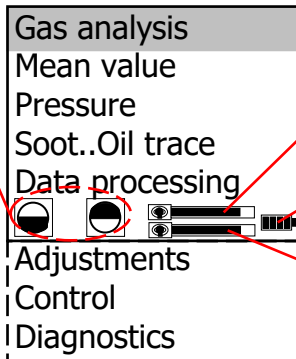

Bar indication radio quality

accu voltage (charging status)


Bar indication transfer quality

Once the control module has been switched on (key **<I/O>**), the main menu is displayed.

8 sub-menus with the following functions are displayed (non-visible sub-menus can be called up scrolling the arrow keys):

- Gas analysis : Perform gas analysis
- Mean value : Measurement with mean value calculation
- Draught measure. : Perform draught or pressure measurement
- Soot...Oil trace : Input of soot measurements results
- Data processing : Assign measurements / Load or send data
- Adjustments : Modify instrument adjustments
- Control : Check operation state of instrument
- Diagnosis : Read-out of firing automats
(only in connection with ecom-AK) /
dT-measurement

If measurements are carried out first the basic module has to be turned on (switch below the info display). Select with the cursor keys the sub-menu "**Gas analysis**" and confirm with **<OK>**. The instrument starts a 1- minute calibration phase and it enquires if you wish to use the data bank. If you want to assign the sampled data to a specific plant, so press **<F1>** (**<F4>** = no: measurement will be performed without assignment).

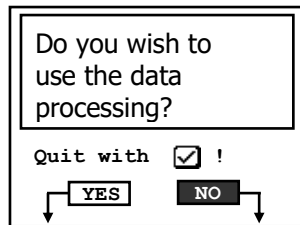

Fuel types acc. to 1st BlmSchV*:

- Fuel oil (B)
- Natural gas (B)
- City gas (B)
- Coke oven gas (B)
- Liquid gas (B)

Fuel type		
Fuel oil (B)		
CO2max	A1	B
15.4	0.50	0.007
Select:	<input type="radio"/>	

Use the cursor keys to select the desired fuel type and confirm with **<OK>**.

* Country specific fuel types programmable on demand.


7. Input or select plant specific data

To call up plant data recorded in the **ecom-J2KN^{PRO}** or to create a new file, the following possibilities are available:

Create new (is automatically selected by first use of a MM card): To create a new file, a numerical number can be assigned.

- Select „**Create new**“
- Confirm with **<OK>**.
- Input a number (max. 16 numbers):

Example: "25.11.2017"

Selection upon:	
Search word	
Memory number	
Create new	
Quit with: 	


 


Input number	
25.11.2017	
Please use the numeral keys!	

Tip: We suggest a date-related input to easily find the data record later on via the search function (search per date).

After confirming with **<OK>** it is possible to enter a text (max. 6 lines with 20 indications) with a software keyboard (for print out or data processing). Proceed as follows:

- choose Text line 1 with the cursor keys **<up/down>** and confirm with **<OK>**
- select keyboard (4 keyboards are available) with **<F3>**
- select with the cursor keys **<up/down/right/left>** a character (selected character is black deposited)
- choose the character with **<OK>** (the last character can be deleted by pressing **<F2>**)
- repeat procedure, until line is complete
- if you want to correct a character, proceed as follows:
 - interrupt choosing characters with **<F4>**
 - select character with the cursor keys **<right/left>**
 - activate choosing characters with **<F4>** and set a new character
- select the next line after pressing **<F1>**

You can close the text input with **<ESC>**. Activate the next free record number with **<OK>** and start flue gas measurement with **<F1>**.

Insert Text												
25.11												
A	B	C	D	E	F	G	H	I	J	K	L	M
N	O	P	Q	R	S	T	U	V	W	X	Y	Z
Ä	Ö	Ü	.	-	()	[]	{	}		
												

Record number: For check of the plant already stored in the instrument, the selection upon record number is most appropriate.

- Select „**Record number**“
- Confirm with **<OK>**.
- Input a random record number:

Example: "1" for record number 1

Selection upon:
Search word
Memory number
Create new
Quit with: ←

Memory number
<input type="text" value="1"/>
Please use the numeral keys!

- Press **<OK>** once the input is completed to call up said data record number. The cursor keys **<Up/Down>** enable the check of the record numbers.
- Press **<F1>** to select the first record number and **<F2>** for the last.
- Press **<F4>** to delete the content of the selected record number.
- Press **<OK>** to activate the record number.
- Finally press **<F1>** to start the gas analysis.

Search word: If the plant code is known, it is possible to find the plant data stored with help of a search machine.

-Select "**Search word**" and press **<OK>**.

-Input with software keyboard 4 related figures of the plant code:


Example: "25.11"
for plant code 25.11.2017

-Press **<F1>** after input to start the searching process. All possible correspondences with this figures sequence will be filtered. The selection can be stepped thru with the arrow keys (**<F1>** for selection beginning, **<F2>** for selection end)

-Press **<OK>** to activate once the desired data block is found

-Press / „**View**“ / **<OK>** to view the previous analysis at this plant

Search word												
25.11												
A	B	C	D	E	F	G	H	I	J	K	L	M
N	O	P	Q	R	S	T	U	V	W	X	Y	Z
Ä	Ö	Ü	.	-	()	[]	{	}		
<input checked="" type="checkbox"/>			<input type="checkbox"/> Del			<input type="checkbox"/> RA						

Memory number 1	
25.11.2017 	
F1:First record F2:Last record F4:Delete	
End with : <input checked="" type="checkbox"/> !	

Measurement available

All measured and calculated values can be called up on 4 display pages using the arrow keys to step thru.

Memory number 1	
25.11.2017	
Data record	12:15:53 25.11.17
Further pages:<↑↓> Memory number 1	

O2	3.2 %
CO2	13.1 %
CO	0 ppm
Eff.	92.5 %
Losses	7.5 %
Exc. air	1.18
T.Gas	184.4 °C
T.Air	20.3 °C
Draught	-0.03 hPa
Gas analysis	12:15:53 25.11.17
Further pages:<↑↓> Memory number 1	

O2	17.5 %
CO 0%	738 ppm
CO	123 ppm
Lambda	7.00
CO measurement	12:15:53 25.11.17
Further pages:<↑↓> Memory number 1	

O2 value in air	
O2	19.5 %
CO	3 ppm
Zug	0.01 hPa
O2 value in air	12:15:53 25.11.17
Further pages:<↑↓> Memory number 1	


Soot..Oil trace	
Boiler temp. :	65°C
1st Soot meas. :	0.5
2nd Soot meas. :	0.3
3rd Soot meas. :	0.7
Oil trace :	NEIN
Mean value :	0.5

dT measurement	
T1	70.4 °C
T2	56.3 °C
dT	14.1 °C
dT measurement	12:15:53 25.11.17
Further pages:<↑↓> Memory number 1	

Press **<F1>** to quit the previous measurement and start recording of the current measurement values.


8. Gas measurement

8.1. Gas analysis



Re-calibrate the instrument after each measurement (after one hour at the latest) to get correct results!

After the 1-minute calibration phase, the instrument switches over to the measurement mode. The gas measurement values can be viewed on different display pages. Use the cursor keys to scroll the pages.

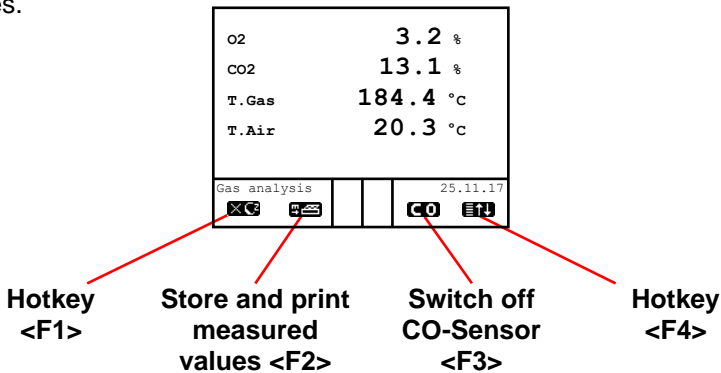

With **<F1>** you can switch from the measured value display to a menu or to „Standby“ selected before (see chapter „Adjustments“). Possible menu options are: Soot... Oil trace, Data processing, Adjustments, Control, Fuel type, Eff. (C), Memory -> M, Pressure. Further you can switch with **<F1>** from any menu back to the measured value display.

With **<F2>** you can print and store the measured values into the intermediate memory at the same time.

With **<F3>** you can switch off the CO sensor, in order to protect the sensor against too high concentrations. The automatic disconnection will switch off the CO sensor at 2500 ppm or. 4000 ppm (depending on the model).

With **<F4>** you can switch from the measured value display to a menu or to „Standby“ selected before (see chapter „Adjustments“). Possible menu options are: Soot... Oil trace, Data processing, Adjustments, Control, Fuel type, Eff. (C), Memory -> M, Display values, Pressure.

Further you can switch with **<F1>** from any menu back to the measured value display.

The position of the measured and calculated values (gas analysis) on the display pages is free selectable (choose „**Display values**“ for **<F4>** Hotkey). For alteration of the existing succession respectively personal listing, proceed as follows:

- Press **<F4>** to activate the function.
 - select the line with the cursor keys **<up/down>**,
 - select the measured or calculated value with the cursor keys **<right/left>**,
 - repeat this procedure until all modifications are completed.
- Press **<F4>** to deactivate the function.

Instruments with magnetic valve and fresh air connection

Instruments that are equipped with magnetic valve technology and fresh air connection are able to be purged or calibrated with fresh air without taken out the probe out of the flue gas duct:

For fresh air purging, press the **<Enter>** key from the measured value display, select the menu item "**Fresh air purge**" and press the **<Enter>** key again. The fresh air purging can be ended with **<F3>** in the measured value display.


For fresh air calibration, press the **<Enter>** key from the measured value display, select the menu item "**Re-Calibration**" and press the **<Enter>** key again. After the following query has been answered with "**YES**" (**<F1>**), the 1-minute calibration phase starts.

Core stream search

Position the sampling probe in the exhaust channel so that the thermocouple is fully surrounded with the gas.

Perform the measurement in the core stream of the exhaust gas channel (probe placed in the highest gas temperature area).

Core stream search

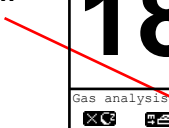

T. Gas °C

180.4

Gas analysis 25.11.17

☒ ☒ + ☒ ☒

Zoom Display:
Adjust parameter
with Cursor keys
<right/left>

A trend indication for T.Gas eases the core stream search. As long as the display shows a + symbol, the measured temperature increases, it means the probe tip moves towards the core stream. If a - symbol is displayed, pull the probe out of the core stream and the temperature sinks. If no temperature change is shown for at least 3 seconds, so the trend indication will be deleted.

CO₂, efficiency, losses, excess air and dew point are calculated values. They can only be calculated if realistic values for the basic parameters O₂ and temperatures are available. It must be ascertained that:

$$O_2 < 20,5 \% \quad \text{and} \quad T.Gas - T.Air > + 5 \text{ } ^\circ\text{C}$$

are given. The dew point can only be calculated accurately if, in the menu "**Adjustments**", the current barometric air pressure value has been entered. This value cannot be determined by the **ecom-J2KN^{pro}**. If the gas temperature falls below the dew point (between 25 and 65 °C), ETA will be calculated with condensation. In the display (C) appears behind ETA.

Correct measurement values are displayed first after a short delay, necessary for the gas transport and the build-up of a stable electrochemical reaction at the sensors. This time period lasts approx. between 1 and 1.5 minute. For recording, printout and evaluation wait until the values do not change anymore. If deviations higher than 2 ppm still occur by the gas values, they can be due to unstable pressure conditions in the exhaust channel.

If the measurement values are stable and the results can be printed out, press the key **<Record>** (disc symbol) to transfer the values in the intermediate memory (caution: store gas analysis and CO measurement values separately). The values are stored for a later printout and, if need be, for a final data record storage.

O2	3.2 %			
CO2	13.1 %			
T.Gas	184.4 °C			
T.Air	20.3 °C			
Gas analysis recorded!				25.11.17
				CO

Measurement stored in intermediate memory

If a printout of the values should be made simultaneously to the intermediate recording, so press **<F2>** (the complete content of the intermediate memory will be printed).

8.2. CO measurement (gas channel check)

For the technical check of gas-fired plants in regards of safety aspects the gas channel check called also CO measurement is used. Hereby the CO concentration in the gas channel is measured after the flow safety device and calculated on an undiluted value (oxygen rest content in flue gas = 0 %).

As the gas conditions after the flow safety device are no more homogeneous because of the flow in of secondarily air and consequently the core stream measurement can be erratic, the analysis of the exhaust gas is performed along the totality of the exhaust pipe diameter. A multi-hole probe (optional accessory) is hereby used as sampling probe. The calculated value shown on the line CO 0 % corresponds to the measured CO concentration supposed the oxygen content would amount 0% by the same exhaust gas volume.

It is consequently the undiluted CO content in exhaust gas. If the value indication is stable, press the key **<Memory>** (disk symbol) to store the result in the intermediate memory. If a printout of the values should occur simultaneously to the recording in the intermediate memory, press **<F2>** (the complete content of the intermediate memory will be printed out).

O2	17.5 %			
CO 0%	738 ppm			
CO	123 ppm			
Exc. air	7.00			
CO measurement recorded!				25.11.17
				CO

Measurement stored in intermediate memory

8.3. O₂ check

This measurement is performed by room-independent plants like gross calorific value plants. It is determined if exhaust gas flows into the combustion air (O₂ content drops down / CO content may be rise) and herewith influence on the combustion quality.

For this analysis a special multi-hole probe (optional accessory) should be used. If the value indicated is stable, press the key **<Memory>** (disk symbol) to store the value in the intermediate memory. If a printout of the values should occur simultaneously to the recording in the intermediate memory, press **<F2>** (the complete content of the intermediate memory will be printed out).

O2 value in air	
o2	19.5 %
co	3 ppm
Draught	0.01 hPa
O2 value in air recorded!	25.11.17
	CO ΔP:0

Measurement stored in intermediate memory

8.4. Flow measurement (option)

This measurement can be done with a pitot tube. At first the pitot factor of the pitot tube must be entered („Adjustments“ / „Internal“ / „Pitot factor“). After connecting the pitot tube to the instrument, the zero point of the sensor can be set with **<F4>**. With **<F1>** the cross section of the flow channel can be entered (needed for calculation of the flow rate). After the pitot tube is positioned in the flow channel, the display shows the speed (m/s), the flow rate (Nm³/h) and the differential pressure (Pa). If the value indicated is stable, press **<Record>** to store the value in the intermediate memory. If a printout of the values should occur simultaneously to the recording in the intermediate memory, press **<F2>** (the complete content of the intermediate memory will be printed out).



Connections for pitot tube

Flow measurement	
V. Gas	0.4 m/sec
M. Flow	44 Nm ³ /h
dP	0.1 Pa
Flow measur. recorded!	25.11.17
	CO ΔP:0

Measurement stored in intermediate memory

8.5. Biogas measurement (option)



For safety reasons only a short measurement (max. 5 minutes) of the fuel can be carried out. Longer measurements or continuous measurements are not permitted!

The measurement of the fuel components can only be carried out with additional sensor equipment (CH₄- and H₂S sensor). For this purpose, the measuring hose of the instrument (connection sampled gas) must be connected to the gas supply of the motor at the measuring nipple (max. 100 hPa gas pressure). If the values indicated are stable, press **<Record>** to store the value in the intermediate memory. If a printout of the values should occur simultaneously to the recording in the intermediate memory, press **<F2>** (the complete content of the intermediate memory will be printed out).

In addition to the determination of the gas components, a pressure measurement (max. 100 hPa gas pressure) can be carried out. For this purpose the measuring hose of the instrument (connection draught) must be connected to the measuring nipple at the gas supply of the motor. The display shows the measurement value which can be stored while pressing **<Record>** and added to those results previous stored in the intermediate memory. The recorded value is shown on the display.

Analysis Biogas			
O ₂	19.5	%	
CH ₄	44.25	%	
H ₂ S	11	ppm	
Analysis Biogas recorded!			25.11.17

Measurement stored in intermediate memory

Pressure Biogas			
50.12 hPa			
Recorded value:			
50.12 hPa			
Pressure Biogas			25.11.17

Measurement stored in intermediate memory

8.6. Draught measurement

A trend indication for the draught conditions in the exhaust channel can already be determined during the gas analysis. Nevertheless the value for the chimney draught will not be stored together with the gas values while pressing the key **<Memory>**.

Indeed the difference pressure sensor tends to drifts because of its sensibility and, for an exact measurement it is consequently advised to re-calibrate the sensor immediately before sampling and documenting the value.

Access the menu while selecting the sub-menu **"Pressure"**. The current value is displayed as well as the instruction to adjust the zero point of the sensor. Release hereto the draught hose from the instrument for a short moment and press **<F4>**. The sensor is herewith re-calibrated.

Fix the draught hose again. The display shows the exact measurement value which can be stored while pressing **<Memory>** and added to the previous results in the intermediate memory. The stored value is shown on the display. Press **<ESC>** to quit the differential pressure measurement menu.

Pressure
-0.12 hPa
--.-- hPa
New 0 point ↴

Pressure
-0.12 hPa
-0.12 hPa
New 0 point ↴

Measurement stored in intermediate memory

8.7. Soot...Oil trace

The sub-menu "**Soot...Oil trace**" enables the input of measured results for boiler temperature, soot dots and oil trace. Select the line „**Boiler temp.**“ and press **<OK>** to activate the input. The input can be made using the numerical keys. Press **<OK>** to store the value in the data record of the measurement.

Soot..Oil trace	
Boiler temp.:	66°C
1st Soot meas.:	.-
2nd Soot meas.:	.-
3rd Soot meas.:	.-
Oil trace :	----
Mean value:	.-

The soot dot measurement is to be performed with the optional heated pistol grip probe which heating function prevents the filter paper to become wet because of the humidity issued by the combustion condensate. The filter paper slot is hereby heated up to approx. 70 °C. Switch hereto the probe heating of the pistol grip probe while selecting „**Adjustments / Internal / Probe heating / <F1>**“.

Proceed as follows:

- Switch on the probe heating while selecting „**Adjustments / Probe heating / <F1>**“.
- Insert a filter paper in the paper slot.
- Select the line „**1st. Soot meas.**“.
- Press **<OK>** to start the measurement. The display shows the volume to be sucked and the pump starts sampling.

If the soot dot analysis are made with a manual pump the sucking procedure can be interrupted while pressing **<F4>** (result value can immediately be entered).

Once 1,63 litre has been sucked in, the instrument will instruct to input the opacity degree. Proceed as follows:

- Release the filter paper from the probe slot.
 - Compare the greyness with the opacity scale.
 - Input the result using the numerical keys and press **<OK>**.
 - Repeat this procedure until all 3 soot dot analysis are completed. The mean value will be calculated and automatically stored.
- The result of the oil trace check is to be documented as follows:

- Set the cursor on the line "Oil trace".
- Input the result with <OK>
("NO", "YES" or "- - -")

Soot..Oil trace	
Boiler temp.:	66°C
1st Soot meas.:	1.0
2nd Soot meas.:	0.5
3rd Soot meas.:	1.5
Oil trace :	NO
Mean value:	1.0

-Press <ESC> to quit the menu once all necessitated inputs have been entered. The measurement is now completed.



**Get the probe cooled down before putting
it back in its fixation!**

8.8. Measurement record and printout



Once the gas analysis is completed, transfer the values recorded in the intermediate memory to the Multi-Media-Card otherwise they could get lost by switch-off of the instrument!

Press **<Print>** (printer symbol) to enter the printing menu. The sampled data can be checked one more time („**View memory**“, **<OK>** and scroll with the cursor keys).

The software keyboard enables the input or correction of the 6 x 20-character text. Select hereto „**Input text**“, press **<OK>** and input text (see chapter 7).


Press „**Memory -> M**“ and **<OK>** to store the all data -if correct- in the internal memory or on the multi-media card. Once the transfer is completed, a "**Memory symbol**" appears on the bottom right of the display. The entered text will only be recorded in the data record by use of the multi-media card.

Select „**Start printout**“ and press **<OK>**) to start a printout.

Press **<ESC>** to turn back to the gas analysis menu.

--ECOM-J2KN--
Start printout
View memory
Memory -> M
Insert Text
Quit with: ←

--ECOM-J2KN--
Start printout
View memory
Memory -> M
Insert Text
Quit with: ←

--ECOM-J2KN--
Start printout
View memory
Memory -> M
Insert Text 
Quit with: ←

Memory symbol

--ECOM-J2KN--
Start printout
View memory
Memory -> M
Insert Text
Quit with: ←

8.9. Printed protocol ecom-J2KN^{pro}

Free text input (6 x 20 characters for comments, remarks, information, etc.)

For example name

Date and time of recording

Results of CO check

Results of O₂ check

Gas analysis results

Results of differential pressure measurement

Results of soot measurement

Free text programming of 8 lines 20 characters each for customers company address

```
*****
* E C O M - J 2 K N *
*****
TextTextTextTextText
TextTextTextTextText
TextTextTextTextText
TextTextTextTextText
-----
Mister Musterman
-----
Date      Time
21.09.04  13:42:02
-----
CO measurement
-----
O2          19.5 %
CO 0%O2    6370 PPM
CO          455 PPM
Exc. air   14.00
-----
O2 value in air
-----
O2          19.9 %
-----
Gas analysis
-----
Fuel type
Fuel oil
-----
T.Air       22 °C
T.Gas       122 °C
T.Boiler    66 °C
O2          19.6 %
CO          170 PPM
CO2         1.0 %
Eff.        50.6 %
Losses      49.4 %
Exc. air    15.00
Dew poi.    105 °C
Draught     -0.02 hPa
Soot        1.5 1.0 0.5
Oil trace   NO
-----
-rbr- Messtechnik
Am grossen Teich 2
58640 Iserlohn
-----
Tel. 02371-945-5
Fax. 02371-40305
EMail : info@rbr.de
http://www.rbr.de
```


9. Mean Value Measurement

By mean value measurement function measurements can be taken in an adjustable time frame and mean values can be calculated. Should the several measurement values or the mean value result be stored a storage place has to be selected as described in chapter 7. If the function “**Store**” is activated, based on this storage place all measurements will be written consecutively on the next storage places. If the function “**Store**” is not activated, the mean value result can be stored on MMC with **<Print> / „Memory -> M.**

After run through fresh air calibration the menu point “**Mean value**” can be chosen. Before the mean value measurement can be started the settings for “**Meas.time**”, “**Scanning**”, “**Printer**” and “**Storage**” should be checked and if necessary be changed. The meanings are:

- Meas. time** = Time frame in which the mean values will be calculated
- Scanning** = time between the measurements taken for mean value calculation
- Printer** = logging of measurements taken for mean value calculation
- Store** = all measurements for mean value calculations will be stored

Gas analysis
Mean value
Pressure
Soot..Oil trace
Data processing
Adjustments
Control
Diagnostics

Mean value
Start measurement
Meas. time
Scanning
Printer
Store
Quit with: 

“**Measurement time**” and “**Scanning**” can be adjusted as follows:

- select menu point and confirm with **<OK>**
- with the numeric keys set the desired time:
 - 0.01 = 1 sec. = minimum value
 - 59.59 = 59 min and 59 sec. = maximum value
- confirm with **<OK>**



The setting for “**Printer**” can be changed as follows:

- select menu point and confirm with **<OK>**
- select desired setting with the cursor keys
- confirm with **<OK>**

The setting for “**Store**” can be changed as follows:

- select menu point and confirm with **<OK>**
- activate storage function with **<F1>**
- deactivate storage function with **<F4>**

By ‘**Start measurement**’ / **<OK>** the evaluation of the measurement values will be started. On the display the actual mean values will be shown (will be updated with new measurement values / switch to the actual values with cursor keys **<up/down>**). It is possible to scroll through the values with the cursor keys **<right/left>**. With **<F2>** you can interrupt and with **<F4>** stop the measurement.

O2	3.2 %
CO2	13.1 %
CO	0 ppm
Eff.	92.5 %
Losses	7.5 %
Exc. air	1.18
T. Gas	184.4 °C
T. Air	20.3 °C
Mean value	25.11.17
15:59 min	 

After finishing the measurement time a protocol of the results with all mean values can be printed (key **<Print>**).

10. Adjustments

Additionally to the **ecom-J2KN^{PRO}** functions described previously, various adjustments can be made in the instrument.

From the main menu select the sub-menu "**Adjustments**" and confirm with **<OK>**. A selection of modifiable parameters, adjustable according to the application, is displayed.

Place the cursor on the desired line and press **<OK>** to call up or modify the adjustment.

The modifiable parameters are:

Re-Calibration	
Unit	
Second unit	
Ref. O2	
Fuel type	
Quit with:	↩

Set clock	
Paper feed	
Internal	
Tightness test	

Re-Calibration (Start with **<OK>**):

-Start of a calibration phase to set new zero-point for the sensors

Unit (adjustment with **cursor keys**):

-Calculation of gas concentrations in:

-ppm	= volume concentration (parts per million)
-mg/m ³	= mass concentration per volume unit
-mg/kWh (undiluted)	= mass concentration per power unit
-mg/MJ (undiluted)	= mass concentration per power unit
-ppm (undiluted)	= volume concentration (parts per million)
-mg/m ³ (undiluted)	= mass concentration per volume unit

Undiluted:

-Conversion of the gas concentration on selected reference oxygen:

-mg/kWh and mg/MJ are always calculated on 0% O₂ basis

-Conversion formula:

$$E_{\text{ref}} = E_{\text{meas}} * \frac{21 - O_{2\text{ref}}}{21 - O_{2\text{meas}}}$$

Second unit (adjustment with **cursor keys**):

-two different unit for one gas concentration possible

Ref. O₂

(for ppm and mg/m³ units - Input after **<OK>** pressing):

-Input of O₂ reference value O_{2ref}

Fuel type (press **<OK>** to access selection list):

-Modification of adjusted fuel type (e.g. by measurements at combination plants)

Set clock (press **<OK>** to access setting menu):

-Correction of internal clock with cursor keys

Paper feed (press **<OK>** to activate paper feeding):

-Paper feed line by line

Tightness test (Start with **<OK>**):

-Leakage test of gas system of the **ecom-J2KN^{PRO}**

-Lock probe with a plug and start test with **<OK>**

Internal (press **<OK>** to open menu):

-Further instrument settings:

Printout contrast (0..9)

(press **<OK>** to access input menu):

-Printer contrast adjustment


Recharging function

(**<F1>** for ON / **<F4>** for OFF):

-Recommended setting = OFF

Key beep (**<F1>** for ON / **<F4>** for OFF):

-Acoustical signal by key pressing

Print contraste
Reload function
Key beep
Graphic menu
Probe heating
Quit with: 
Low power mode
Language: English
F1 Hotkey
F4 Hotkey
Value options
RF-connect. only
USB
Bluetooth
WLAN
Pitot factor
Printout

Graphic menu (<F1> for ON / <F4> for OFF):

-Activation of graphic mode

Low power mode (<F1> for ON / <F4> for OFF):

-Switching on / off the probe heating and the gas cooler at battery operation

Probe heating (<F1> for ON / <F4> for OFF):

-ON/OFF switch for probe heating for soot measurement

Language: English

-Info about language (3 languages selectable)

F1 Hotkey (Choose after pressing <OK>):

-Change the menu you get to after pressing <F1> in value display

F4 Hotkey (Choose after pressing <OK>):

-Change the menu you get to after pressing <F4> in value display

Value options (Change with <OK>):

-Temperature in °C or °F (not possible at all instruments)

-Excess Air as proportionate number or in %

-Calculation of efficiency with and without condensation

-Pressure in hPa, mmH₂O, "H₂O, PSI, mbar
(not possible at all instruments)

RF-connect. only (Choose after pressing <OK>):

-**Standard**: no radio connection if control module is located in basic module

-**RF-connect. only**: radio connection also if control module is located in basic module

-**Remote**: without function

USB (selection after pressing <OK>):

-Adjustment of transfer speed (Cursor keys <Up/Down>) and Protocol (Cursor keys <Right/Left>) for the USB interface (connection USB):

-Protocol DAS = Protocol for the program DASNT

-Protocol Enhanced = Protocol for the program DAS5

Bluetooth LE (<BLE> no adjustment needed):

-Online data = Remote

WLAN (selection after pressing <OK>)

Instrument as Access Point (for connection with mobile terminals):

-**(Start/Stop WLAN:** manual switching of WLAN connection

– available only with deactivated Auto Connect)

-**Access Point:** (<F1> for ON / <F4> for OFF)

-**(W.O.) Auto Connect:** Automatically connection

(<F1> for ON / <F4> for OFF)

-**Security:** use password for connection

(<F1> for ON / <F4> for OFF)

the password is „1234567890“

-**Channel:** Input channel (1 – 13)

(selection after pressing <OK>)

Connection with existing network:

-**(Start/Stop WLAN:** manual switching of WLAN connection

– available only with deactivated Auto Connect)

-**Existing Network:** available only with deactivated Access Point

-**(W.O.) Auto Connect:** Automatically connection

(<F1> for ON / <F4> for OFF)

-**Network scan:** Search for available networks

(selection with <OK>)

-**WPA password:** Input of password for selected network

Pitot factor (selection after pressing <OK>):

-Input of pitot factor for flow rate calculation (ecom flow probe =

0.93). If the flow rate calculation is not needed, set pitot factor to 0

Printout (selection after pressing **<OK>**):

- Text input for printout on measurement protocol (8 x 24 characters)
- Input the text of line 1 as follows:
 1. Activate character selection list with **<OK>**.
 2. Select keyboard type with **<F3>**
(4 different keyboards available).
 3. Use the cursor keys to select the desired character
(selected character is outlined by black background).
 4. Confirm selection while pressing **< OK >**.
 5. Repeat procedure until desired text is complete.
 6. Once input for line 1 is completed, deactivate the characters selection mode with **<F1>** and move to the second line with the cursor key **<Down>**.
 7. Once all lines have been processed as desired, exit the menu with **<ESC>**.

11. Control

The electrochemical sensors alter their output values along the operation period. The programme controls the sensors and corrects drifts. If the drifts and the correlated measurement errors increase, an error message is displayed. In this case the corresponding sensor must be changed by an authorised service centre. The control menu informs about the current status values for the sensors as well as about (page 2 and 3 with cursor keys <up/down>):

Next service centre	<table border="1"> <tr> <th colspan="2">Control</th> </tr> <tr> <td>eccm GmbH Am Großen Teich 2 58640 Iserlohn</td> <td>O2 10744 mV CO 7 mV Batt: 4.50 V Bat.B 6.09 V</td> </tr> <tr> <td colspan="2">Tel.: 02371-945-5 Fax: 02371-40305 eMail: info@eccm.de</td> </tr> </table>	Control		eccm GmbH Am Großen Teich 2 58640 Iserlohn	O2 10744 mV CO 7 mV Batt: 4.50 V Bat.B 6.09 V	Tel.: 02371-945-5 Fax: 02371-40305 eMail: info@eccm.de		Accu voltage control module basic module										
Control																		
eccm GmbH Am Großen Teich 2 58640 Iserlohn		O2 10744 mV CO 7 mV Batt: 4.50 V Bat.B 6.09 V																
Tel.: 02371-945-5 Fax: 02371-40305 eMail: info@eccm.de																		
Serial number	<table border="1"> <tr> <td>Operation hours : 8.45 hrs</td> </tr> <tr> <td>Serial no. : JZFN 12345</td> </tr> <tr> <td>Service tel. : 02371-945-5</td> </tr> <tr> <td>Program version : V3.0 / 12.07.16</td> </tr> <tr> <td>Next unit check : 20.04.17</td> </tr> </table>	Operation hours : 8.45 hrs	Serial no. : JZFN 12345	Service tel. : 02371-945-5	Program version : V3.0 / 12.07.16	Next unit check : 20.04.17	Operation hours											
Operation hours : 8.45 hrs																		
Serial no. : JZFN 12345																		
Service tel. : 02371-945-5																		
Program version : V3.0 / 12.07.16																		
Next unit check : 20.04.17																		
Software version	<table border="1"> <tr> <th colspan="2">Control</th> </tr> <tr> <td>20 1 X</td> <td>O2 10744 mV</td> </tr> <tr> <td>4.2 /s 22 ppm</td> <td>CO 7 mV</td> </tr> <tr> <td>4.2 /s 4 X</td> <td>Batt: 4.50 V</td> </tr> <tr> <td>0.0 /s 11 X</td> <td>Bat.B 6.09 V</td> </tr> </table>	Control		20 1 X	O2 10744 mV	4.2 /s 22 ppm	CO 7 mV	4.2 /s 4 X	Batt: 4.50 V	0.0 /s 11 X	Bat.B 6.09 V	Recommended maintenance date						
Control																		
20 1 X	O2 10744 mV																	
4.2 /s 22 ppm	CO 7 mV																	
4.2 /s 4 X	Batt: 4.50 V																	
0.0 /s 11 X	Bat.B 6.09 V																	
Radio quality	<table border="1"> <tr> <td>Operation hours : 8.45 hrs</td> </tr> <tr> <td>Serial no. : JZFN 12345</td> </tr> <tr> <td>Service tel. : 02371-945-5</td> </tr> <tr> <td>Program version : V3.0 / 12.07.16</td> </tr> <tr> <td>Next unit check : 20.04.17</td> </tr> </table>	Operation hours : 8.45 hrs	Serial no. : JZFN 12345	Service tel. : 02371-945-5	Program version : V3.0 / 12.07.16	Next unit check : 20.04.17	Number of CO-switch -offs											
Operation hours : 8.45 hrs																		
Serial no. : JZFN 12345																		
Service tel. : 02371-945-5																		
Program version : V3.0 / 12.07.16																		
Next unit check : 20.04.17																		
Sent frames (radio)	<table border="1"> <tr> <th colspan="2">Control</th> </tr> <tr> <td>Last service (history)</td> <td>O2 10744 mV</td> </tr> <tr> <td>19.12.15 133 hrs</td> <td>CO 7 mV</td> </tr> <tr> <td>--,--,--</td> <td>Batt: 4.50 V</td> </tr> </table>	Control		Last service (history)	O2 10744 mV	19.12.15 133 hrs	CO 7 mV	--,--,--	Batt: 4.50 V	ppm hours of CO sensor								
Control																		
Last service (history)	O2 10744 mV																	
19.12.15 133 hrs	CO 7 mV																	
--,--,--	Batt: 4.50 V																	
Received frames (radio)	<table border="1"> <tr> <td>Gas pump is running</td> <td>Ⓟ</td> </tr> <tr> <td>Air valve is open</td> <td>⚡</td> </tr> <tr> <td>CO purging is running</td> <td>⚡ CO</td> </tr> <tr> <td>Gas cooler ready for use</td> <td>⚙️ ✓</td> </tr> <tr> <td>Heated hose ready for use</td> <td>🔥 ✓</td> </tr> <tr> <td>Probe heating is switched on</td> <td>🔥</td> </tr> <tr> <td>Heated head ready for use</td> <td>🔥</td> </tr> <tr> <td>Calibration phase</td> <td>CAL</td> </tr> </table>	Gas pump is running	Ⓟ	Air valve is open	⚡	CO purging is running	⚡ CO	Gas cooler ready for use	⚙️ ✓	Heated hose ready for use	🔥 ✓	Probe heating is switched on	🔥	Heated head ready for use	🔥	Calibration phase	CAL	Number of errors
Gas pump is running		Ⓟ																
Air valve is open	⚡																	
CO purging is running	⚡ CO																	
Gas cooler ready for use	⚙️ ✓																	
Heated hose ready for use	🔥 ✓																	
Probe heating is switched on	🔥																	
Heated head ready for use	🔥																	
Calibration phase	CAL																	
Number of frames (USB)	<table border="1"> <tr> <td>Gas flow (liter per minute)</td> <td>2.24</td> </tr> <tr> <td>Radio mode</td> <td>📶</td> </tr> <tr> <td>battery operation</td> <td>🔋</td> </tr> </table>	Gas flow (liter per minute)	2.24	Radio mode	📶	battery operation	🔋	Number of instrument switch -ons										
Gas flow (liter per minute)		2.24																
Radio mode	📶																	
battery operation	🔋																	
Date of last service																		

Gas pump is running	Ⓟ	<table border="1"> <tr> <td>Gas flow (liter per minute)</td> <td>2.24</td> </tr> <tr> <td>Radio mode</td> <td>📶</td> </tr> <tr> <td>battery operation</td> <td>🔋</td> </tr> </table>	Gas flow (liter per minute)	2.24	Radio mode	📶	battery operation	🔋
Gas flow (liter per minute)	2.24							
Radio mode	📶							
battery operation	🔋							
Air valve is open	⚡							
CO purging is running	⚡ CO							
Gas cooler ready for use	⚙️ ✓							
Heated hose ready for use	🔥 ✓							
Probe heating is switched on	🔥							
Heated head ready for use	🔥							
Calibration phase	CAL							

12. Data Processing

12.1. Communication

If a MM card is inserted in the slot, so it will be used as record medium. The menu „**Data processing**“ offers the following functions:

Select
View
Memory (M)
DRT <-> PC !
Format
Quit with: ←
Automatic measu.

Select:

For search or creation of plants files for measurement values assignment (compare chapter 7.).

View:

Recorded values to a selected plant can be viewed (compare chapter 7.).

Memory (M):

Here all stored measurements (sorted by record number) can be seen. Individual measurement values can be called as follows:

- Choose record number with the cursor keys and confirm with <OK>
- Scroll with the cursor keys
- Leave record number with <ESC>

	Date	Time	Fuel type
1	01.09.17	11:01:24	Fuel oil
2	01.09.17	11:02:34	Fuel oil
3	01.09.17	11:04:20	Fuel oil
4	01.09.17	11:07:44	Fuel oil
5	01.09.17	11:11:25	Fuel oil
6	01.09.17	11:23:02	Fuel oil
7	01.09.17	11:44:09	Fuel oil
8	01.09.17	11:53:13	Fuel oil
9	01.09.17	11:59:59	Fuel oil
10	01.09.17	11:59:59	Fuel oil

Select: ▲▼↔

DRT <-> PC !:

Load data:

Enables the data import from e.g. ecom software (available on our website „www.ecom.de“). See chapter „Technical Data“ for data format information (please observe the transfer options of your software!).

DRT <-> PC !
Send data
Load data
Quit with: ←

Proceed as follows:

- Connect **ecom-J2KN^{pro}** and PC via USB cable.
- Select “**Load data**” and confirm with **<OK>**.
- Answer the displayed question with **YES (<F1>)**.
- Decide if the data recorded can be cancelled (**<F1>** for **YES** / **<F4>** for **NO**).
- Start the data transfer on your PC.

Send data:

With this function the data records completed with measurement values can be transferred to the PC programme (procedure similar to chapter „**Load data**“).

Format:

This function is usually needed by the initial adjustment of the instrument at our factory (preparation of internal memory for data record).

Caution: All stored values will be cancelled!

12.2. Automatic measurement (option)

The configuration of the **ecom-J2KN^{pro}** with operation securing, self regulating additional components like the condense trap, the gas cooler and the magnetic valve technique permits even a long term operation of the instrument. By setting time intervals for the measurement the instrument switches autonomously to fresh air purge after the measurement phase (gas will be sucked via the connection fresh air) and operates a calibration phase for the sensors.

This cycle repeats itself until the automatic measurement will be finished. For setting the time intervals select from the menu “**Data processing**” the menu item “**Automatic measu.**”. The time intervals have following meanings:

Automatic measu.	
Automatic	
Data logger	
Automatic time	120 min
Measur. time	115 min
Save to MMC	1 sek
CSV+Header	
Quit with:	←

Automatic time

(min. 10 minutes / max. 120 minutes)

Time interval from one calibration phase to the next one.

Measurement time (max. Automatic time minus 5 minutes)

Time interval within the automatic time in which the instrument gather measurement values, i.e. in which the measurement gas will be sucked. The difference between the measurement time and the automatic time is used for purging the sensors with fresh air.

Save to MMC (min. 1 second / max. 255 seconds)

Adjustment of the interval time for data logger recordings.

CSV+Header (<F1> for ON / <F4> for OFF)

Adjustment of data logging with or without column headings.

Start the automatic measurement by setting the cursor to line “**Automatic**” and pressing the key <OK> (on top right on the display appears “**A**” for automatic).

12.3. Data logger

Here a Data logger record (“**Data logger**” and key <OK> / on top right on the display appears the disk symbol) can be started or finished (just available when using the multi-media card). With <Memory> you can interrupt and continue the record (only in gas analysis). For each recording one file will be written on the card. The files will be numbered consecutively (J2KDL-00.csv, J2KDL-01.csv and so on) and can be transferred to PC with a card reader. The length of a dataset is 500 byte which means that on a 32 MB card 64000 measurements could be recorded.

12.4. Data logging with DASNT2

In addition to data logger recordings the data could also be transferred online via USB, Bluetooth (option) or via data interface to the software "**DASNT2**". For the USB connection, a driver is required. Software and USB driver are available free of charge from the ecom website. The following transfer parameters must be set at **ecom-J2KN^{pro}** ("**Adjustments**" / "**Internal**" / "**USB** "):

- **1200 Baud**
- **Protocol DAS**

Please note the hints in the software manual.

12.5. Data processing with DAS5

To display and storage of measured values and measured value gradients the software "**DAS5**" is available. With the help of a multi-media card customer and measurement data can be exchanged between software and instrument. An online connection to store measured values and measured value gradients is possible with USB or WLAN. For the USB connection, a driver is required. Software and USB driver are available free of charge from the ecom website. The following transfer parameters must be set at **ecom-J2KN^{pro}** ("**Adjustments**" / "**Internal**" / "**WLAN**"):

- **1200-38400 Baud** (setting as in the software "**DAS5**")
- **Protocol Enhanced**

For the wireless connection (WLAN), the following transfer parameters have to be set at **ecom-J2KN^{pro}** ("**Adjustments**" / "**Internal**" / "**WLAN**"):

- **Access Point = ON**
- **Auto Connect = ON**

Please note the hints in the software manual.

12.6. Data processing with App

To display and storage of measured values, the App “**ecomMANDER**” for smartphones (iOS or Android) is available (the instrument must be equipped with Bluetooth LE or WLAN). Test results are stored along with customer information in a pdf-file and can be sent f.e. as email attachment. Links to free download of the App can be found on the ecom website. For the wireless connection (WLAN), the following transfer parameters must be set at **ecom-J2KN^{pro}**

("Adjustments" / "Internal" / "WLAN"):

- **Access Point = ON**
- **Auto Connect = ON**

13. Diagnostics

13.1. Fault diagnostic

The **ecom-J2KN^{pro}** is able to receive and to process information sent via cable by the **ecom-AK** (read-out head for digital firing automats).

In the main menu select the sub-menu "**Fault diagnosis**" and confirm with **<OK>**. The **ecom-J2KN^{pro}** tries to get into contact with the **ecom-AK** (message: „Searching“) Once the connection is realized, the current operation stand of the burner is shown graphically on the display. The operation stand can be recorded (max. 100 sec).

Press **<OK>** to start a new recording phase (reset).


ecom-AK



Cabel connection to AUX



ecom-J2KN^{pro}

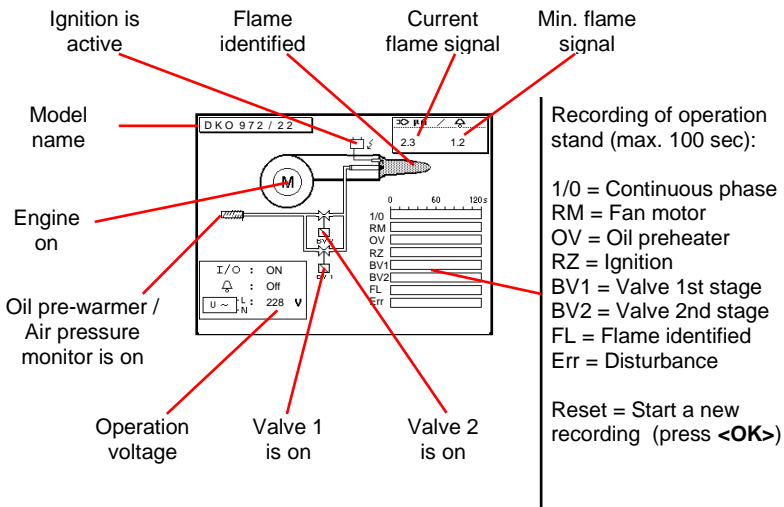

Use the <Up/Down> keys to call up further data of the firing automat. The 2nd display page lists information about the disturbance history (type and volume of information depending on firing automat).

Number of burner starts at a total resp. since reset of firing automat

Last 2 errors (Satronic)
Last 5 errors (Siemens)


Error history		
Number of startups total	677	
Service counter actual	142	
No error		
No flame at the end	004	9:23 min
Of safty time	0.0 µA	227 V
Flame signal during	001	12 sec
Straylight check	2.2 µA	225 V
Total	: 46	
Straylight	: 22	
Safty time	: 9	
Loss of flame	: 17	
FT/LW	: 0	

Current error

Error statistics
(errors number)

The 3rd display page lists information about the monitoring times (type and volume of information depending on firing automat)

Monitoring times of firing automat

Timing values	
Safty time	4.9 sec
Delay time valve 2	40.0 sec
Pre-ignition time	17.0 sec
Post-ignition time	20.0 sec
Delay straylight sup.	11.5 sec
Straylight supervision	5.0 sec
Rest time TSA	4.1 sec
Further pages: 	

13.2. dT measurement

With the **ecom-J2KN^{PRO}** a difference temperature measurement is possible. For measurements at pipes (e.g. in and out of heating systems) special temperature sensors are needed, that can be ordered from your responsible ecom distributor. Select from the main menu point "**Diagnostics**" the submenu "**dT measurement**" and confirm with **<OK>**.

The instrument indicates the temperature T1 (sensor at connection „gas temperature“), the temperature T2 (sensor at connection „air temperature“) and the difference of both temperatures (T1 - T2). With the key **<Memory>** the result of the measurement are stored in intermediate memory. A printout can be started with **<Print>**.

dT-measurement		
T1	70.4 °C	
T2	56.3 °C	
DT	14.1 °C	
DT-measurement recorded!		25.11.17

Measurement stored in intermediate memory

13.3. Heating Check (option)

The heating check is a simple, expressive process to evaluate a complete heating plant (heat production, distribution and transfer) from the energetic point of view.

Hereby the single plant components get inspected by the heating engineer in a combination of measurements and visual assessment and valued in regards of their energetic quality acc. to a negative point system of maximum 100 points.

The higher the score, the farer the current plant is away from the desirable energetic stand and the higher the energy saving potential would be if modernisation measures are conducted.

In combination with the special probes required hereto, the **ecom-J2KN^{PRO}** is able to perform the measurement of the heating check parameters: gas losses, ventilation losses and surface losses. Out of the main menu point "**Diagnostics**", select the sub-menu "**Heating Check**" and confirm with **<OK>**.

Heating Check	
Gas losses	
Surface losses	
Ventilation losses	
Results	
Cancel	
Quit with:	←

The **gas losses measurement** is to be performed with the instrument's sampling probe in the gas core stream after menu call up (see chapter 8.1.). Once the measurement is recorded with **<Memory>** (disk symbol) the conversion of the measurement results in negative points is available under the menu point „**Results**“.

O2	3.2 %
CO2	13.1 %
T.Gas	184.4 °C
T.Air	20.3 °C
Gas analysis recorded!	25.11.17
	CO
	ETU

Measurement stored in intermediate memory

The **surface losses** measurement is performed by a temperature sensor specific for surfaces. The temperature difference between boiler surface (temperature sensor at connection „gas temperature“) and room temperature (air temperature sensor) is determined and the percentage loss is calculated. Once the menu point is called up, the boiler performance must be inputted. To easy the measurement width, depth and height of the boiler can also be entered (dimensions will be memorized for surface calculation). Please proceed as follows:

- activate respective input window with **<OK>**
- inputs values using the keys numerical function
- confirm input with **<OK>**




Temperature sensor for surfaces


Surface losses	
P.Boiler	24.5 KW
Width	--- m
Depth	--- m
Height	--- m
Start measurement	
Quit with:	↩

The dimensions can be entered also later for each surface.

Press „**Start measurement**“ / <OK> to start the real measurement. Proceed as follows:

 - select surface (boiler side) to be measured with <F1> or <F2>
- position surface sensor
- record temperature difference with <Memory> - up to 10 values can be recorded per surface out of which a mean value will be calculated automatically
- if need be, cancel measurements with <F4>
- repeat this procedure for each surface

Surface losses			
Width	---	m	
Height	---	m	
	Surf	---	m ²
	T.S.	---	°C
	T.A.	---	°C
	T.S.	21.5	°C
	T.A.	21.5	°C
-0-			

 Surface losses			
Width	1.20	m	
Height	1.20	m	
	Surf	1.44	m ²
	T.S.	40.5	°C
	T.A.	21.5	°C
	T.S.	42.5	°C
	T.A.	21.5	°C
-1-			

Once all surface temperatures have been determined, quit the menu with <ESC>. The surface losses get automatically calculated. The value conversion in negative points is available in the menu point „**Results**“.

The **ventilation loss** measurement is performed by a flow probe 30 sec. after burner switch-off. This measurement can be performed at the earliest 5 min. after instrument's switch-on as the pressure sensor requires this period of time for stabilisation. Once the menu is called up, the values for air pressure, external temperature, boiler performance and exhaust gas pipe diameter must be entered. Hereto proceed as follows:

- open respective window with <OK>
- input figures using numerical function of keys
- confirm input with <OK>



Flow probe

Press „**Start measurement**“ / **<OK>** prior to going thru the following steps to start the measurement:

- release tubing of the flow probe
- wait for zeroing of pressure sensor
- re-connect tubing of the flow probe
- position flow probe into exhaust gas pipe
(observe mark for flow direction)
- switch off burner and simultaneously press **<F1>**
or:
- press **<F2>** to activate timer (5 sec.) and switch off burner by beep
- after approx. 30 sec. the measurement value converted in negative points is available

An overview of the measurements is available under „**Results**“. Press **<Print>** to print them out.

Heating Check	
Gas losses	
Surface losses	
Ventilation losses	
Results	
Cancel	
Quit with:	↩

Heating Check	
Gas loss	2.9 %
Points	2.6
Surf. lo	2.29 %
Points	2.6
Vent. lo	3.11 %
Points	2.6
Quit with:	↩

14. Maintenance tips



Do not use other sensors or feelers from other manufacturers otherwise the TÜV approval will not be valid anymore!

To secure the accuracy of your measuring instrument we recommend the annual check by an authorized ecom partner. In the case of strong demand (e.g. permanent several hours of measurement per day, rough conditions etc.) shorter intervals between checks should be selected - please contact your ecom partner. All ecom partners are listed under www.ecom.de. The following advices will be of help for the daily check and maintenance of single parts or assemblies:



Service made by service centres not authorised by ecom GmbH will result in a complete and immediate lost of any warranty!

Fine dust filter (condensate trap/gas cooler)

Screw off the cover of the condensate trap/gas cooler and check the state of the particle filter. Change it once the filter has a grey colour (number 2-3 of the soot comparison scale).




Fine dust filter

Ventilation filter

The ventilation filter should be changed, if the filter is grey colored (number 2-3 of the soot comparison scale). Remove for this the filter holder with the help of a screw driver (recesses on the right of and left side). Change the filter cartridge and fasten the filter holder.



Ventilation filter

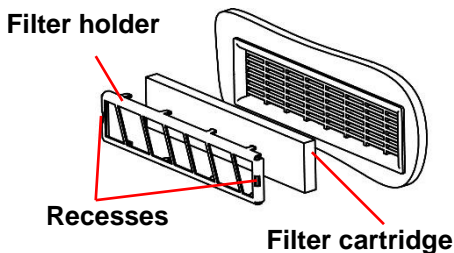

Sensors

The sensors get calibrated with the reference gas fresh air by each switch-on procedure. The state of the sensors is permanently controlled by the instrument. New sensors age along the operation period because of the wearing of the reagents (oxygen sensor) and due to soiling respectively exceeding concentrations beyond the nominal measurement range (toxic sensors).

The output values of the sensors are (enter menu "**Control**"):

O₂ approx. 12000 mV
Others 0 mV (+/- 150)

If an error message is displayed during calibration and cannot be eliminated despite several calibration phases, so the instrument must be checked by a qualified and authorised service centre. The oxygen sensor must show a value >7000 mV, otherwise it must be changed by an authorised service centre.

The CO sensor is protected against overload by the internal programme. If the limit value of 4000 ppm is exceeded, a second pump switches on and flows the sensor with fresh air.

SO₂/NO_x filter

In the tubing leading to the CO sensor on the top of the instrument there is a chemical filter for filtering SO₂ and NO_x out of the flue gas. The filter material is manganese-4-oxide granules and should be changed once it has turned grey (colour change: pink> brown> black> grey> white).

Probe and hose

Depending on the frequency of use, probe and hose should be regularly cleaned in order to release particle deposits and to prevent early wearing due to corrosion.

- Release the connections at the instrument and at the probe grip to free the hose.
- Clean the hose (flow warm water in then dry respectively blow water drops out).

Change printer paper roll

- Release the printer cover.
- If necessary, extract the paper rest out of the printer ("**Adjustments**"/"**Paper feed**"/<OK>).
- Remove the printer shaft and place the new paper roll on the printer shaft.
- Insert the paper end in the slot (future printed side must be ahead).
- Press ("**Adjustments**"/"**Paper feed**"/<OK>) to transport ± 10 cm paper thru the printer.
- Place the printer shaft back in the fixation.
- Insert the paper thru the cover of the printer compartment.
- Close the printer compartment while fixing the cover.

15. Technical Data

Parameter	Range	Principle
O ₂	0 ... 21 vol. %	Electrochemistry
CO	0 ... 10000 ppm	Electrochemistry
CO% (option)	0 ... 63000 ppm	Electrochemistry
NO (option)	0 ... 5000 ppm	Electrochemistry
NO ₂ (option)	0 ... 1000 ppm	Electrochemistry
SO ₂ (option)	0 ... 5000 ppm	Electrochemistry
H ₂ S (option)	0 ... 5000 ppm	Electrochemistry
H ₂ (option)	0 ... 2000 ppm	Electrochemistry
C _x H _y (option)	0 ... 4 vol. % (CH ₄)	Catalytic
C _x H _y (option)	0 ... 2000 ppm (C ₃ H ₈)	Infrared
C _x H _y (option)	0 ... 30000 ppm (CH ₄)	Infrared
CO% (option)	0 ... 63000 ppm	Infrared
CO ₂ (option)	0 ... 20 vol. %	Infrared
CH ₄ (option)	0 ... 100 vol. %	Infrared
Air pressure	300 ... 1100 hPa	DMS bridge
CO ₂	0 ... CO _{2max}	Calculation
T-Gas	0 ... 500 °C	NiCr/Ni
T-Air	0 ... 99 °C	Semi-conductor
Differential pressure	0 ... +/- 100 hPa	DMS bridge
Efficiency	0 ... 120 %	Calculation
Losses	0 ... 99,9 %	Calculation
Excess air	1 ... ∞	Calculation
CO undiluted (adjustable ref. O ₂)		Calculation
Flue gas dew point		Calculation
Power supply	110 - 230 V ~ / 50 - 60 Hz~ Battery 7,2 V / 11,6 Ah	
Radio signal	Transmission power: < 5 mW Frequency range: 868 – 870 MHz (AX5243)	
Bluetooth LE	Transmission power: < 5,5 mW Frequency range: 2402 – 2480 MHz (CYBLE 202007-01)	
WLAN	Transmission power: < 32 mW Frequency range: 2400 – 2495 MHz (GS2200MIZ)	

Protocol printer	integral; 58mm paper width; printout end individually programmable
Indication	graphic display; backlit
Dim. (W x H x D)	510 mm x 330 mm x 250 mm
Weight	approx. 14 kg with standard sampling probe
Application limits	+5 °C to +40 °C; max. 90 % RH, non-condensing

Subject to technical changes
V3.89 / 01.2023

16. FAQ

- Where do I find important instrument information?
- In the menu „Control“ all important instrument information are shown (e.g. battery voltage, sensor values, unit number, next service date, operation hours etc.). With the arrow keys stands you can switch to the second page.
- How long is the life span of the sensors?
- The life span depends on the operating hours and the instrument equipment. The life span of the toxic sensors (CO, NO, SO₂, NO₂) is affected by high gas concentrations and a not sufficient purging. The life span for these sensors amounts to on the average of approx. 4 years. The life span of the O₂ sensor is independent of the operating hours and amounts also to approx. 4 years.
- Which sensors can I exchange?
- The following sensors are exchangeable:
- O₂ sensor
 - CO sensor (pre-calibrated)
 - NO sensor (pre-calibrated)
 - SO₂ sensor (pre-calibrated / only together with CO sensor)
- The instrument shows the error message „O₂ sensor 0 mV“!
- The sensor must be renewed.
- The instrument shows the message „Check required“!
- This message appears automatically every 12 months or after 250 operating hours. Note: This is a recommendation to let check the instrument. The instrument is however still ready for use.
- The instrument shows the error message „T-Gas“ or „T-Air“!
- Possible reasons could be:
- Cable is broken (at the plug)
 - T-Air sensor is broken
 - Thermocouple is broken
 - Cable is defective
- Note: The error messages can be ignored at the J2KN^{PRO} by pressing „OK“. Calculations that depends on these temperatures are not implemented.
- The instrument shows wrong or inaccurately CO₂ values!
- Possible reasons could be:
- O₂ is defective (CO₂ values are calculated from the O₂ values)
 - Pump is not working correctly
 - Leakage in the gas way
 - Condensate trap / gas cooler is clogged

My instrument cannot be switched on!

- Please check the mains cable
- Please check the fuse
- Please check mains connection (Plug socket switched on?)
- Please load the accumulator min. 8 hours (Accumulator could be over-discharged)

My instrument does not print!

Please check whether the printer paper is correctly inserted. The thermal printer writes only on the thermally sensitive side. Please use always the correct paper for the printer, you will prevent defects at the printer. Please make sure that the printer is clean (no chads in the drive).

Can I change the printout?

You can change the printout (Menu: Adjustments).

Hint: If you have several instruments of the same type, you can locate an error by exchanging the accessories (probe, hose, temperature sensor etc.).

If further questions or problems should arise, please contact the next authorised service centre.

Description of data record ecom-J2KN^{PRO} with Multi Media Card

Format data logger records: J2KDL-xx.csv (separation mark between values = comma)

Format punctual measurements: J2KDV.txt (separation mark between values = comma)

Column	Description	Remark / Example
A	Date	DD.MM.YYYY (also US-Version)
B	Time	HH:MM:SS (also US-Version)
C	O ₂ in vol.%	0,0 - 21,0
D	CO in ppm	0 - 4000
E	NO in ppm	0 - 5000
F	NO ₂ in ppm	0 - 1000
G	SO ₂ in ppm	0 - 5000
H	CO converted*	
I	NO converted*	
J	NO ₂ converted*	
K	NO _x converted*	
L	SO ₂ converted*	
M	T.Gas in °C or °F	0 - 500 (US-Version with other range in °F)
N	T.Air in °C or °F	0 - 99 (US-Version with other range in °F)
O	Draught in hPa	0,00 - 20,00
P	CO ₂ in vol.%	0,0 - 25,0
Q	Efficiency in %	0,0 - 120,0
R	Losses in %	0,0 - 100,0
S	Excess air	> 1,00
T	Dew point in °C oder °F	0 - 500 (US-Version with other range in °F)
U	Poisoning index	> 0,0
V	O ₂ (gas channel check) in vol.%	0,0 - 21,0
W	CO (gas channel check) in ppm	Related to 0,0 vol.% O ₂
X	CO (gas channel check) in ppm	Measured value
Y	O ₂ (O ₂ check) in vol.%	0,0 - 21,0
Z	T.Boiler	0 - 999
AA	T.Sensor	0 - 99
AB	O ₂ reference	0,0 - 21,0
AC	Unit	0=ppm; 1=mg/m ³ ; 2=mg/kWh; 3=mg/MJ
AD	Norm	N = converted to O ₂ ref.
AE	Fuel type number	Index acc. to instrument table
AF	Fuel type text	Text acc. to instrument table
AG	Soot 1	0,0 - 9,9
AH	Soot 1	0,0 - 9,9
AI	Soot 1	0,0 - 9,9
AJ	Oil trace	0=no; 1=yes;
AK	20 characters text	
AL	20 characters text	
AM	16 characters text	
AN	Serial number	
AO	CO (O ₂ check) in ppm	
AP	Zug (O ₂ check) in hPa	
AQ	CxHy	
AR	Number copy data	
AS	T1 (deltaT-measurement)	
AT	T2 (deltaT-measurement)	
AU	Velocity	m/s
AV	CO Environment	CH-version = Kind of control
AW	free	CH-version = Load range
AX	Comment text	
AY	Comment text	
AZ	Comment text	
BA	Comment text	
BB	H ₂ in ppm	CH version = Oil consumption
BC	H ₂ converted*	CH version = Thermal output
BD	Sensor 6 in ppm	CH version = Operation hours counter
BE	Sensor 6 converted *	CH version = Code

BF	dP (velocity) in Pa	0 – 1000,00
BG	Air pressure in hPa	300 – 1100
BH	Unit 2	0=ppm; 1=mg/m ³ ; 2=mg/kWh; 3=mg/MJ; 4=ppmN; 5=mg/m ³ ; 6=---
BI	CO (Unit 2)	
BJ	NO (Unit 2)	
BK	NO ₂ (Unit 2)	
BL	NO _x (Unit 2)	
BM	SO ₂ (Unit 2)	
BN	Analogue input 1	
BO	Analogue input 2	
BP	Sensor 7 in ppm	
BQ	Meas. gas volume in l/min	
BR	CO %	0 - 63000
BS	last column	0

* converted to unit (column AC) and converted on O₂ ref. (Column AB) when column AD = N

Data transfer ecom-J2KN^{PRO} to PC (USB)

The transfer occurs with 1200 - 38400 BAUD; 1 stop bit; no parity (ANSI character set)
CR / LF is send after each data record

Column	Description	Length
1-5	Storage number	5
6-7	Hour	2
8-9	Minute	2
10-11	Day	2
12-13	Month	2
14	Fuel type number (0 – 9)	1
15-19	T.Air in °C or °F	5
20-24	T.Gas in °C or °F	5
25-29	O ₂ in vol.% (without comma)	5
30-34	CO in ppm	5
35	Draught (sign / - = minus; blank character = plus)	1
36-39	Draught in Pa	4
40	Oil trace (0 = no; 1 = yes)	1
41	Soot 3	1
42	Soot 2	1
43	Soot 1	1
44-48	free	5
49-53	NO in ppm	5
54-58	T.Boiler	5
59-78	20 character text (1st display line)	20
79-98	20 character text (2nd display line)	20
99-114	16 character text (3rd display line)	16
115-116	2 signs (HEX \$80, \$00)	2
117-121	O ₂ (CO measurement) in vol.% (without comma)	5
122-126	CO (CO measurement) in ppm related to 0,0 vol.% O ₂	5
127-131	free	5
132-136	free	5
137-141	free	5
142-146	free	5
147-151	free	5
152-156	O ₂ (O ₂ check) in vol.% (without comma)	5
157-161	CO (O ₂ check) in ppm	5
162	Draught (O ₂ check / sign / - = minus; blank character = plus)	1
163-166	Draught (O ₂ check) in Pa	4
167-168	CR-LF (#13#10)	2

Data transfer PC to **ecom-J2KN^{PRO}** (ANSI character set):

First send: \$00 \$01
Then send: 56 characters text
Then send: \$80 \$00

Once the **ecom-J2KN^{PRO}** has processed the data, it sends \$FF back. If the data volume is too large, it sends another byte back. If the data transfer should be terminated, so just 60 byte \$00 need to be sent to the instrument.

EG-Konformitätserklärung | EC Declaration of Conformity

Hiermit erklärt der Hersteller
The manufacturer

ecom GmbH
Am Großen Teich 2
D-58640 Iserlohn, Germany



in alleiniger Verantwortung für die Ausstellung dieser Erklärung, dass die nachfolgend aufgeführten Produkte:
hereby declares under its sole responsibility, that the products

Abgasanalysegeräte / flue gas analysis devices

Type: ecom-B

ecom-J2KNpro

ecom-CL2/ B+

ecom-J2KNpro IN / -J2KNpro INS

ecom-D

ecom-J2KNpro TECH

ecom-EN3

ecom-ST

allen einschlägigen Bestimmungen der folgenden EU-Richtlinien entsprechen:
comply with the following European Directives:

2014/53/EU **Funkanlagenrichtlinie / Radio Equipment Directive**
2011/65/EU **RoHS**
2014/35/EU (*) **Niederspannungsrichtlinie / Low Voltage Directive (*)**

(*): Gilt nur für Geräte mit 230 V Eingangsspannung / applies only to devices with 230 V input voltage

Folgende Normen wurden angewendet:
The following standard/s were used:

EN 61010-1:2010/A1:2019	Sicherheitsbestimmungen für elektrische Mess-, Steuer-, Regel- und Laborgeräte <i>Safety requirements for electrical equipment for measurement, control, and laboratory use</i>
EN 300 328 V2.2.2	Breitband-Übertragungssysteme - Datenübertragungsgeräte zum Betrieb im 2,4 GHz-Band <i>Wideband transmission systems - Data transmission equipment operating in the 2,4 GHz band</i>
ETSI EN 301 489-1 V2.2.3	Elektromagnetische Verträglichkeit (EMV) - Standard für Funkeinrichtungen und -dienste – <i>ElectroMagnetic Compatibility (EMC) standard for radio equipment and services</i>
ETSI EN 301 489-17 V3.2.4	Elektromagnetische Verträglichkeit (EMV) für Funkeinrichtungen und -dienste - Teil 17: Spezifische Bedingungen für Breitbanddatenübertragungssysteme <i>ElectroMagnetic Compatibility (EMC) standard for radio equipment and services - Part 17: Specific conditions for Broadband Data Transmission Systems</i>
EN 61326-1:2013	Elektrische Mess-, Steuer-, Regel- und Laborgeräte - EMV-Anforderungen <i>Electrical equipment for measurement, control and laboratory use – EMC requirements</i>
EN 50270:2015/AC:2016-08	Elektromagnetische Verträglichkeit - Elektrische Geräte für die Detektion und Messung von brennbaren Gasen, toxischen Gasen oder Sauerstoff <i>Electromagnetic compatibility - Electrical apparatus for the detection and measurement of combustible gases, toxic gases or oxygen</i>
EN IEC 63000:2018	Technische Dokumentation zur Beurteilung von Elektro- und Elektronikgeräten hinsichtlich der Beschränkung gefährlicher Stoffe <i>Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances</i>

Iserlohn, 25.07.2022



 Matthias Platte (Geschäftsführer / Managing Director)

Declaration of Conformity

The manufacturer

ecom GmbH
Am Großen Teich 2
D-58640 Iserlohn, Germany



hereby declares under its sole responsibility, that the products

Flue gas analysis devices

Type: ecom-B	ecom-J2KNpro
ecom-CL2/B+	ecom-J2KNpro IN / INS
ecom-D	ecom-J2KNpro TECH
ecom-EN3	ecom-ST

comply with the following European Directives:

Radio Equipment Regulations 2017
The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (RoHS)
Electrical Equipment (Safety) Regulations 2016 (*)

(*): applies only to devices with 230 V input voltage

The following designated standards / other technical standards and specifications were used:

EN 61010-1:2010/A1:2019	Safety requirements for electrical equipment for measurement, control, and laboratory use
EN 300 328 V2.2.2	Wideband transmission systems - Data transmission equipment operating in the 2,4 GHz band
ETSI EN 301 489-1 V2.2.3	ElectroMagnetic Compatibility (EMC) standard for radio equipment and services
ETSI EN 301 489-17 V3.2.4	ElectroMagnetic Compatibility (EMC) standard for radio equipment and services - Part 17: Specific conditions for Broadband Data Transmission Systems
EN 61326-1:2013	Electrical equipment for measurement, control and laboratory use – EMC requirements
EN 50270:2015/AC:2016-08	Electromagnetic compatibility - Electrical apparatus for the detection and measurement of combustible gases, toxic gases or oxygen
EN IEC 63000:2018	Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

Iserlohn, 12.10.2022


Matthias Platte (Geschäftsführer / Managing Director)

INTELLIGENT MESSEN!
MEASURE WITH INTELLIGENCE!



ecom GmbH

Am Großen Teich 2
D-58640 Iserlohn

Info@ecom.de

www.ecom.de

Phone: +49 2371 945-5

Fax: +49 2371 40305

UK importer:

DRM Technic Ltd.

15C Raleigh Hall Industrial Estate,
GB-Stafford, Staffordshire, ST21 6JL

sales@drmtechnic.com

www.drmtechnic.com

Phone: +44 (0) 1782 638 491